




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

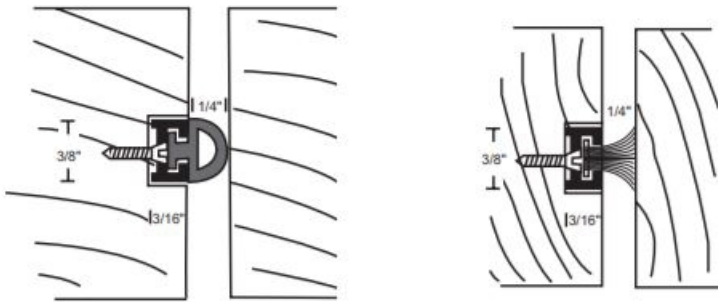

Installation Instructions

1. Cut seal to length.
2. Prepare the door by mortising 7/16" wide x depth desired to properly seal the gap.
3. Remove gasket material from metal retainer by sliding out the end.
4. Install metal retainer into mortised portion of door and fasten with screws provided.
5. Replace gasket material by sliding into metal retainer.
6. Adjust seal so it does not impede proper closing and latching of door.

SKU: N136



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com