




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

**BHMA
CERTIFIED**

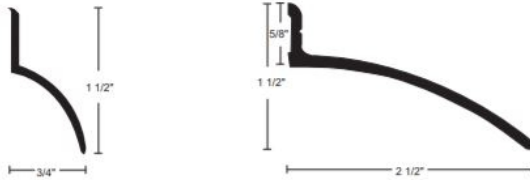

Typical installation is to exterior face of frame header. 17 can also be applied to exterior face of door at sill.

Length of drip strip should extend beyond width of door. Install full width of frame header if possible.

Installation Instructions

1. Mark hole locations.
2. Drill pilot holes for screws using a 7/64" bit.
3. Fasten screws, working from one end to the other.
4. Caulk top edge of drip strip and around each screw to prevent water penetration.

SKU: N16

