TRADEMARK HARDWARE
WORLD OF QUALITY HARDWARE

Installation Guide

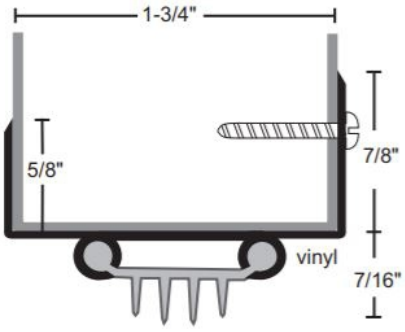

Installation Instructions

1. Measure and cut door shoe to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed 1/16" against sill.
4. Mark screw holes.
5. Drill pilot holes with a 7/64" bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.

SKU: N99

www.tmhardware.com 845-388-1300 845-388-1388 sales@tmhardware.com