




Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type)

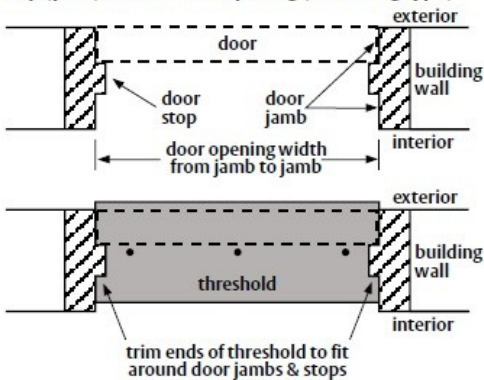

1. Carefully cope to fit within the frame opening, making sure seal makes proper contact with door face.
2. Trim seal 1/16" longer than threshold at each end.
3. Use a sealant or compound at all edges and joints.
4. Fasten with screws provided.