



**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE


# INSTALLATION GUIDE

## Tools Required:



## Installation Instructions:

Top (plan) view of door opening (out-swing type)

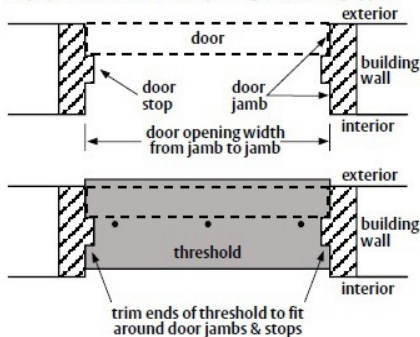

1. Carefully cope to fit within the frame opening making sure seal will make contact with door face.
2. Trim seal 1/16" longer than threshold at each end. Use a sealant or compound at all edges and joints.
3. Fasten with screws provided.

