



**Trademark
HARDWARE**


INSTALLATION GUIDE

Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type)

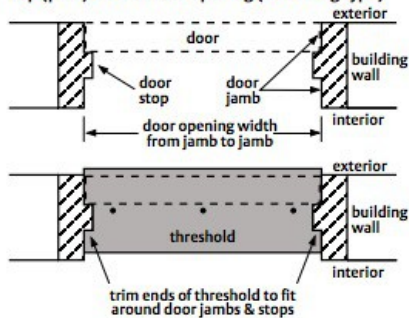

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position threshold so that vinyl seal contacts face of door along entire width when door is closed (see above illustration).

NOTE: Trim seal 1/16" longer than threshold at each end.

3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)