



**Trademark
HARDWARE**


INSTALLATION GUIDE

Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type)

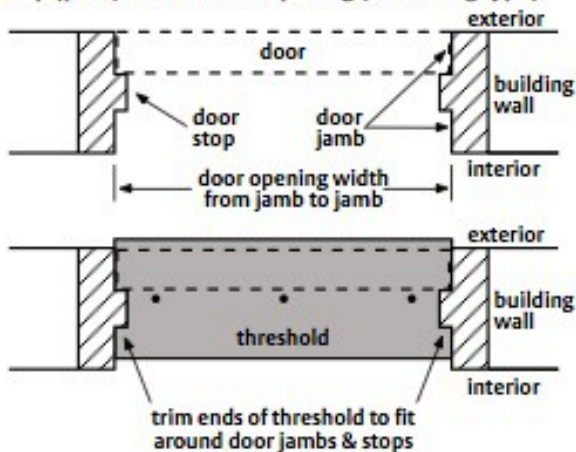

1. Carefully trim to fit within the stops of frame opening.
2. Trim seal 1/16" longer than trimmed stop at each end.
3. Position against door to assure proper seal (not too tight).
4. Fasten to threshold with #10 x 3/4" flat head self tapping machine screws.