




**Trademark  
HARDWARE**

# INSTALLATION GUIDE


Apply with adhesive side of camper tape toward underside of camper shell.

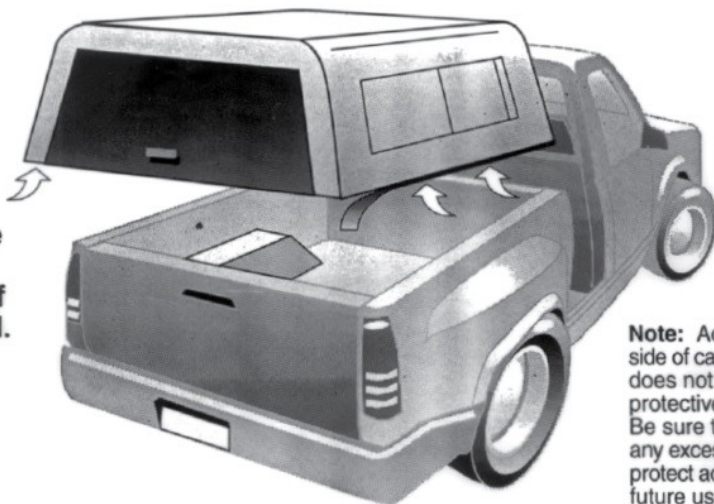

**Note:** Adhesive side of camper tape does not have a protective backing. Be sure to recoil any excess so as to protect adhesive for future use.

## Installation Instructions:

1. Apply to surfaces of camper shell which normally come in contact with truck panels.
2. Apply to clean, dry surface.
3. As you uncoil tape, apply adhesive side to the underside of the camper shell.
4. Cut to length.

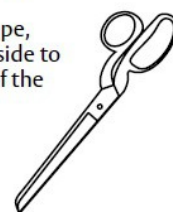

**Trademark  
HARDWARE**

148 Horton Drive, Suite B  
Monsey, NY 10952

Phone: 845-388-1300  
Fax: 845-367-4657

[www.TMHardware.com](http://www.TMHardware.com)  
[sales@tmhardware.com](mailto:sales@tmhardware.com)