




Trademark
HARDWARE

INSTALLATION GUIDE

USE ON:

MULLIONS

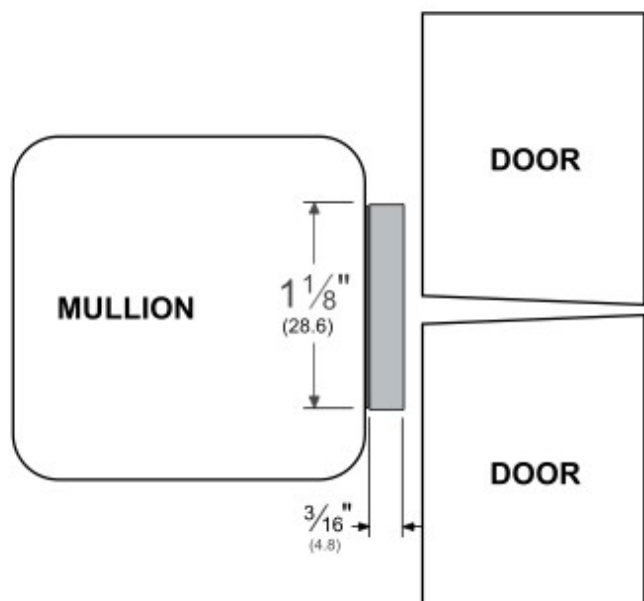

Installation **Instructions:**

1. Clean and degrease mullion face.
2. Measure and cut gasketing to length.
3. Remove adhesive backing.
4. Apply to mullion face.

