



**Trademark
HARDWARE**




INSTALLATION GUIDE

Privacy Door Latch

Tools Required:



Installation Instructions:

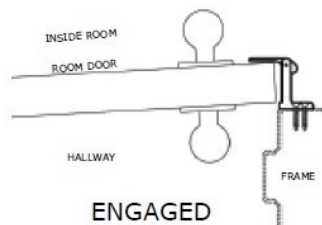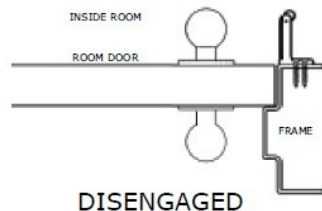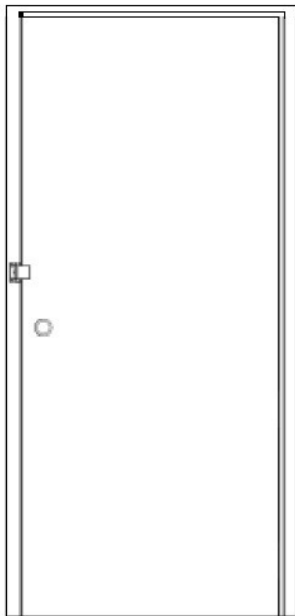

1. Determine mounting height.
2. Apply the mounting template sticker to the frame at mounting height.
3. Center punch and drill 5/32" pilot holes where indicated.
4. Mount the latch on the door frame (on top of the template) with the fasteners provided.
5. Check product performance by extending the PDL lip after the door is closed.
6. Close the door and push the PDL to the disengaged position. The door should open freely.