




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE


INSTALLATION GUIDE

1. Assemble hanger and retaining stop.

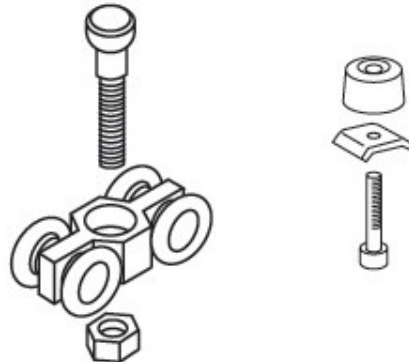


2. Fit hanger apron to door panel.


Drill $\frac{1}{2}$ " (13) dia x $1\frac{1}{2}$ " (38) deep hole 5" (127) from door edge to centerline and centered in the door thickness.

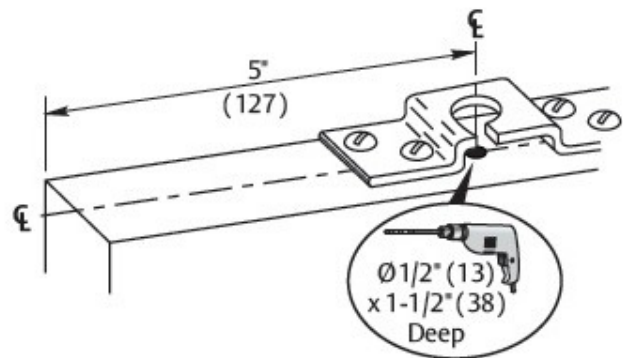

3. Insert hangers and retaining stop.

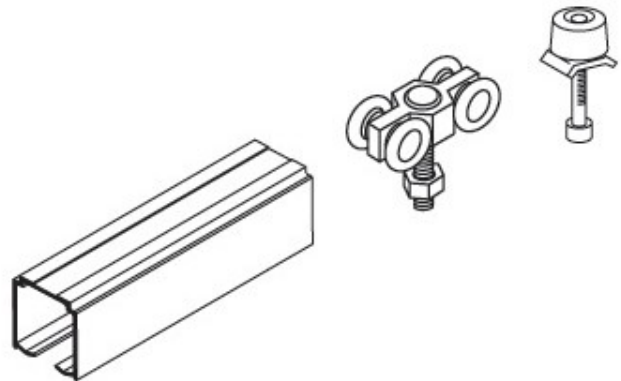

4. Secure track.

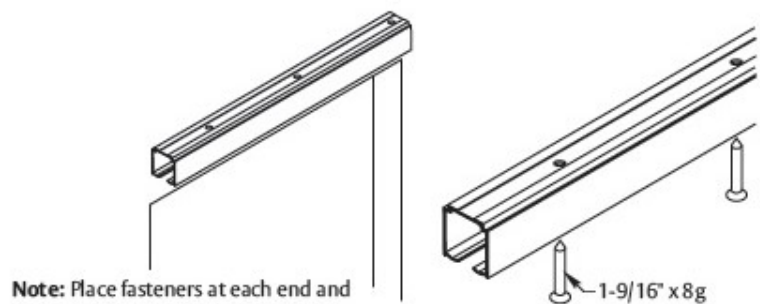

www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE


INSTALLATION GUIDE

5. Mortise door and fit door guide.

Attach a plumb line to hanger. Place hanger inside track. Using plumb line, mark the centerline of floor to mark for centerline of guide location.

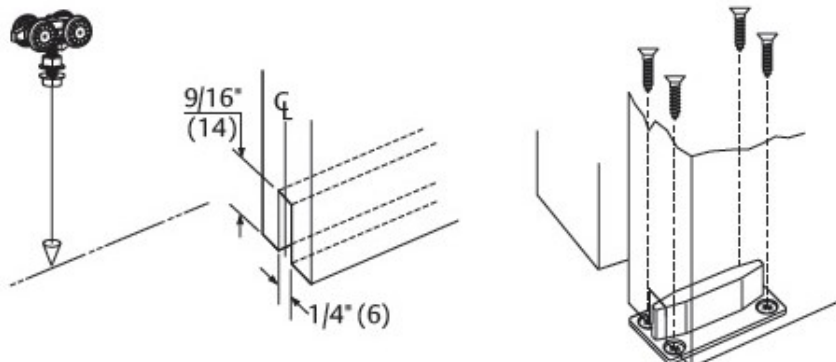

6. Attach door panel and adjust until level.

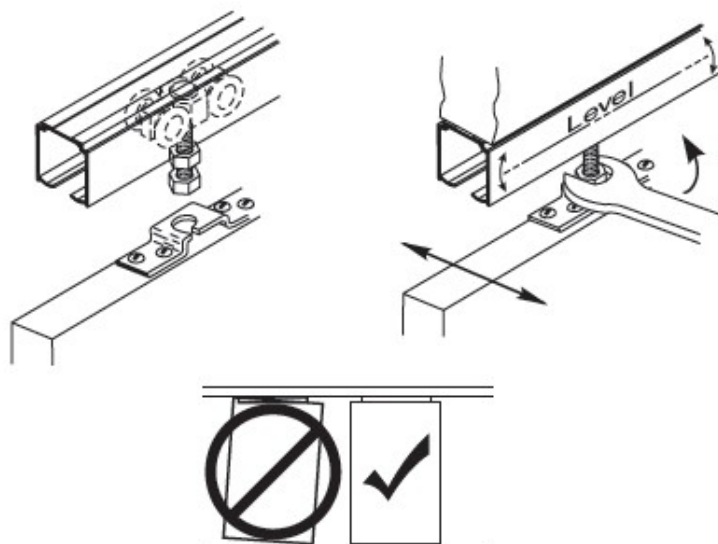

7. Position and secure retaining stop.

