



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

Door Leaf Capacity - Up to 200 lbs

H200PACK Kit Includes:

2 ea - H222R1 Hangers




2 ea - TELS-14 In Track Stops

1 ea - 102N Mortised Guide


1 ea - Adjusting Wrench

Track sold separately.

Bracket, Fascia, Roller Guide, and Threshold shown are optional and sold separately.

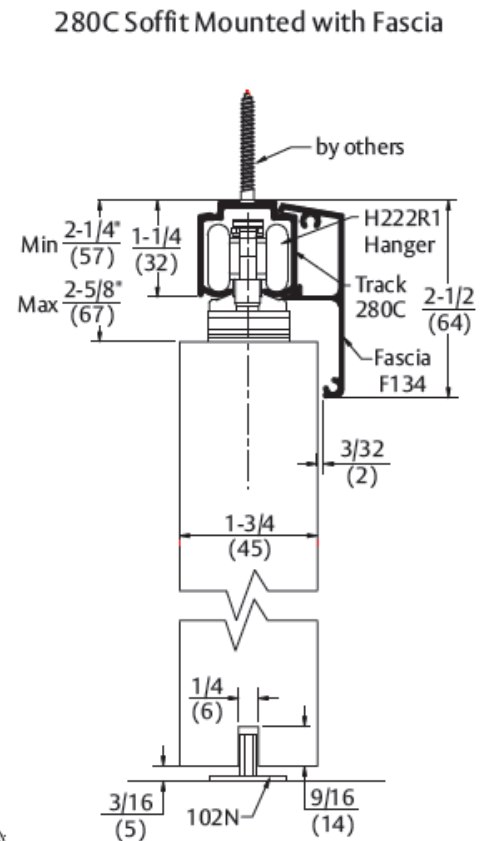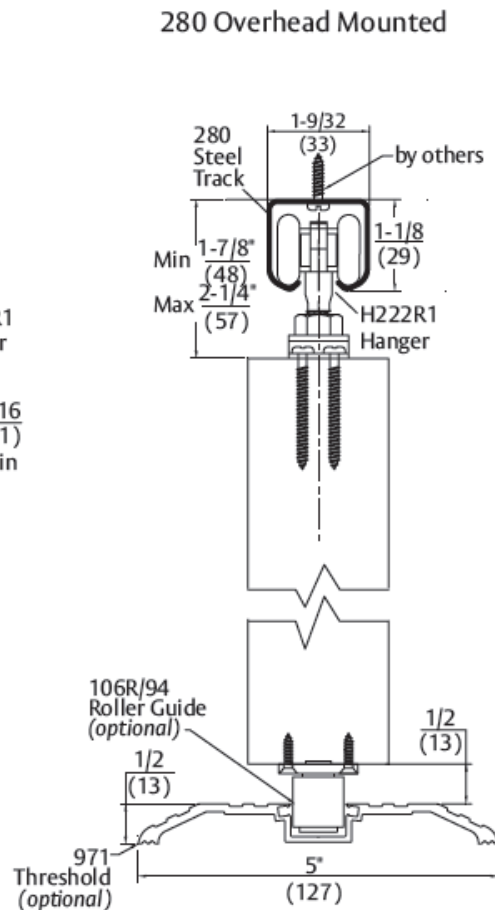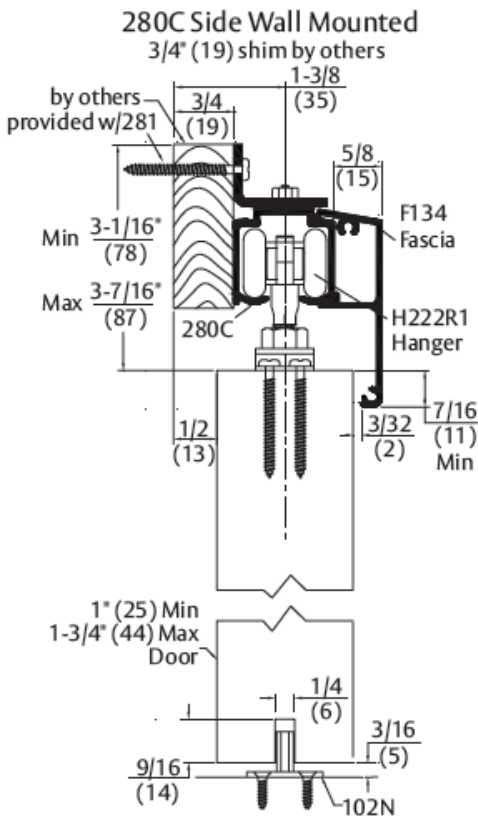


1. Assemble hanger.

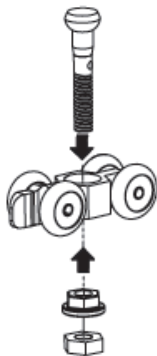


2. Fit hanger apron to door panel.

Drill 1/2" (13) dia x 1 1/2" (38) deep hole 5" (127) from door edge to centerline and centered in the door thickness.

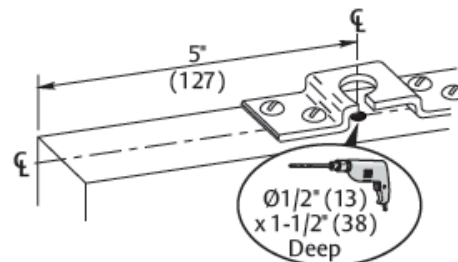

3. Insert hangers and retaining stop.

Ensure that hanger flange is pointing in the direction of clip portion of stop as shown below.

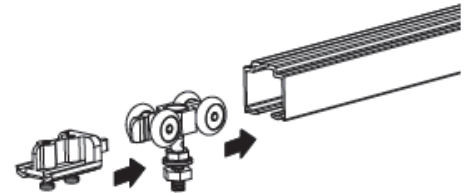

www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE


4. Secure track.

Ensure track is plumb and level.

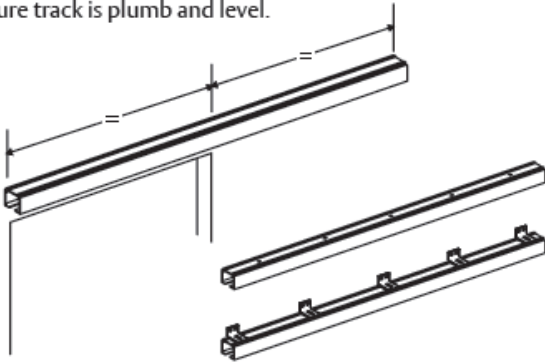


5. Mortise door and fit door guide.

Attach a plumb line to hanger. Place hanger inside track. Using plumb line, mark for position of door guide on the floor.

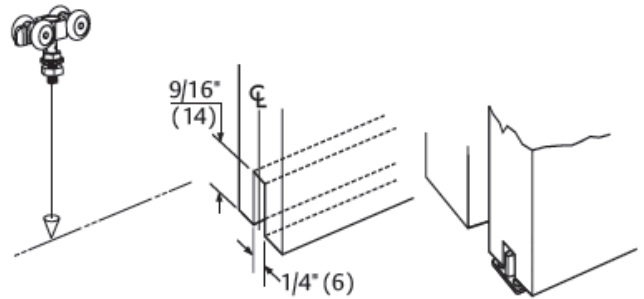


6. Face & Soffit Fix Options.


Use one bracket or fastener at each end of track and no more than 3' in between.

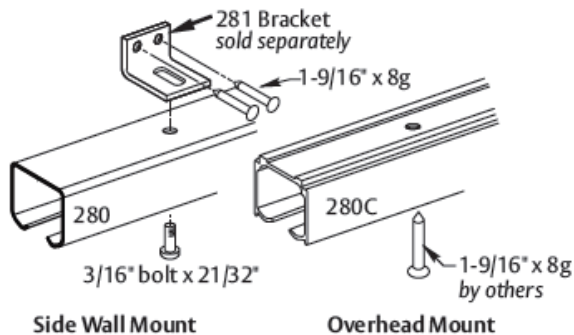

7. Attach door panel and adjust until level.

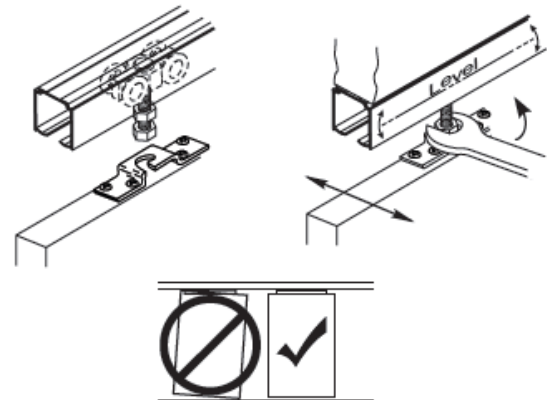

8. Position and secure retaining stop.

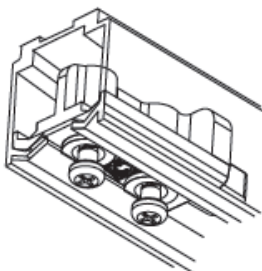

Alternative guides. (Sold Separately)

