



**TRADEMARK  
HARDWARE**


WORLD OF QUALITY HARDWARE

# INSTALLATION GUIDE


**Door Leaf Capacity - Up to 600 lbs.**

Manufactured by


**HENDERSON**

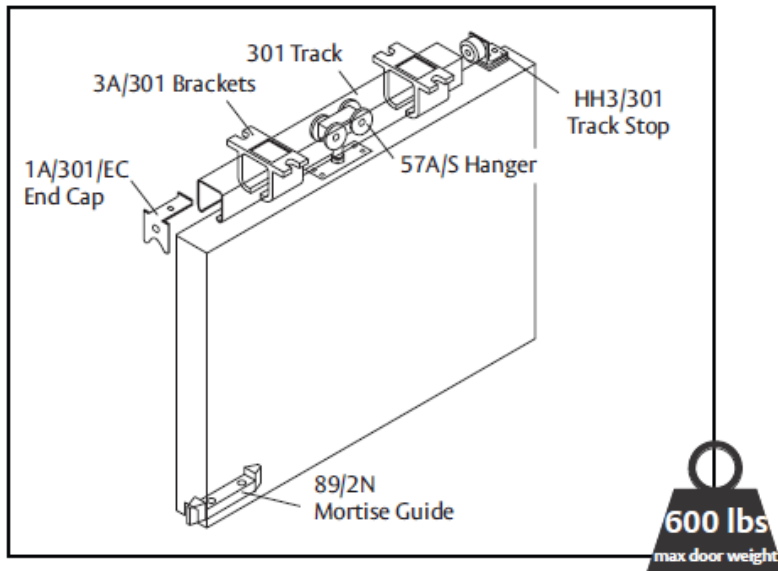

## Overhead Mount

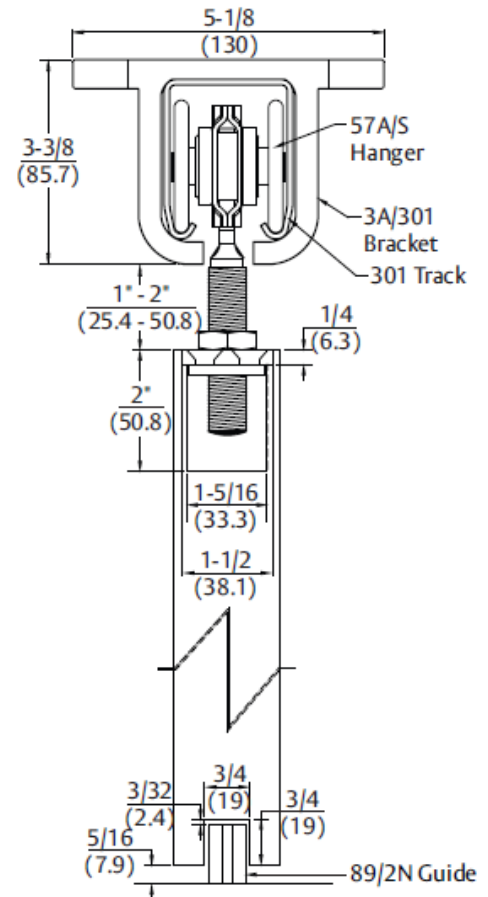

Part Number	Material	Track Length	Door Width
H600S-OH/6	Steel	72"	36"
H600S-OH/8	Steel	96"	48"
H600S-OH/10	Steel	120"	60"
H600S-OH/12	Steel	144"	72"

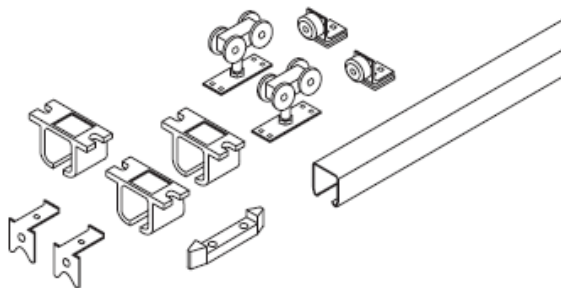

## H600S-OH Kits Include:

- 1 ea 301 Galvanized Steel Track
  - 3A/301 Aluminum Alloy Overhead Mount Track Brackets (One at each end and no than three feet in between)
- 2 ea 1A/301/EC Aluminum Alloy End Caps
- 2 ea 57A/S Zinc Coated Steel Body, Wheels, and Pendant Bolt Hangers
- 2 ea HH3/301 Galvanized Steel In-Track Stops
- 1 ea 89/2N Gray Nylon Mortise Guide



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com



**TRADEMARK  
HARDWARE**


WORLD OF QUALITY HARDWARE

# INSTALLATION GUIDE

## 1. Install brackets.


Slide brackets onto track. Inward brackets should be 2' (61m) from each end and centered on track.

Do not install end brackets with end caps at this time.

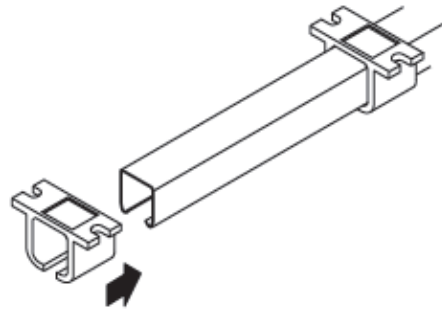



## 2. Secure track.

Ensure track is plumb and level.

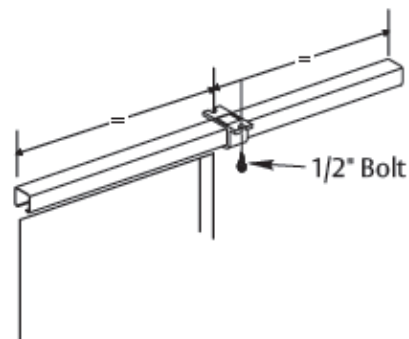


## 3. Mortise door for door guide.

Attach a plumb line to hanger. Remove one end bracket. Place hanger inside track. Using plumb line, mark the centerline of door guide.

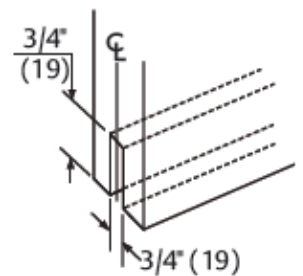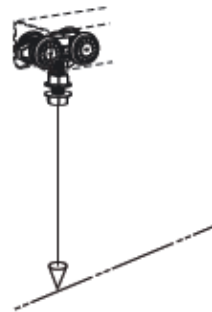

## 4. Fit door guide to floor.

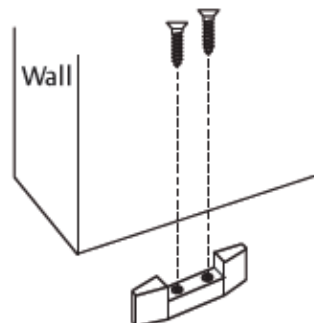

[www.tmhardware.com](http://www.tmhardware.com)



845-388-1300



845-388-1388



[sales@tmhardware.com](mailto:sales@tmhardware.com)




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE


# INSTALLATION GUIDE

## 5. Prepare top of door for hanger hardware.

- ① Drill  $1\frac{5}{16}"$  (33.3) dia. x  $2"$  (50.8) deep hole  $8"$  (203.2) from door edge to centerline of hole and centered in thickness of door.
- ② Route door for  $\frac{1}{4}"$  (6.4) thick,  $7\frac{5}{16}"$  (185.7) long, and  $1\frac{1}{2}"$  (38.1) wide plate centered on centerline of hole and thickness of door.

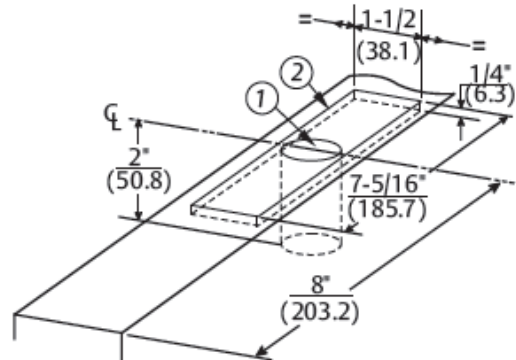


## 6. Attach hangers to doors.

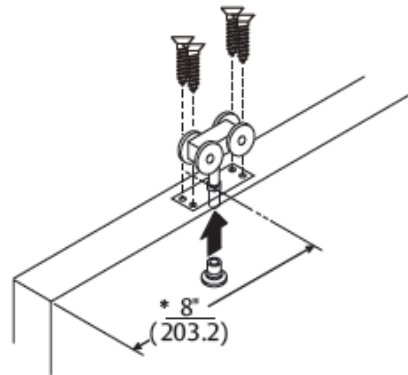

\*From door edge to centerline of hanger bolt and plate.

## 7. Hang door.

Slowly guide complete door unit into track using installed floor guide. Install track stops.

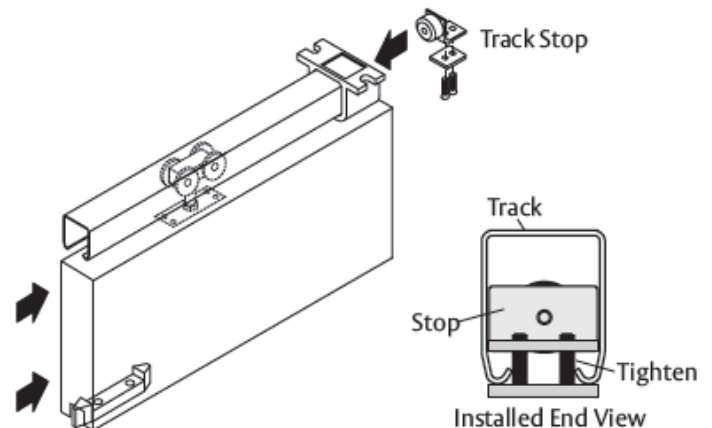

[www.tmhardware.com](http://www.tmhardware.com)



845-388-1300



845-388-1388



[sales@tmhardware.com](mailto:sales@tmhardware.com)




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

# INSTALLATION GUIDE

## 8. Install end bracket caps.

Replace end brackets onto ends of track with end caps in position.  
Check for smooth operation. Adjust and tighten stops.

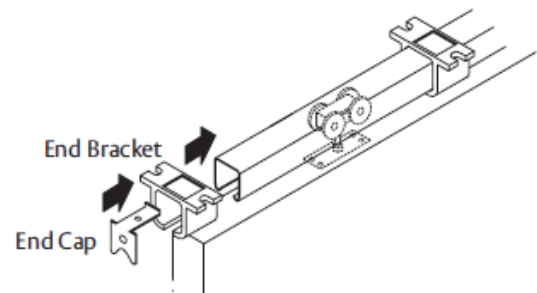

### IMPORTANT:

Visually check all bolts and screws; tighten if necessary.  
If access door is installed, check operation.  
Check operation of doors for ease.

- Door catches floor guide: Check that the track is level. Ensure that the track and floor guide are parallel to within  $\pm \frac{1}{8}"$  (3).
- Door scrubs: Check that the door is level on hangers.
- Door moves while in operation: Check hangers are installed correctly.

