




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE



Door Leaf Capacity - Up to 800 lbs.

Manufactured by
HENDERSON

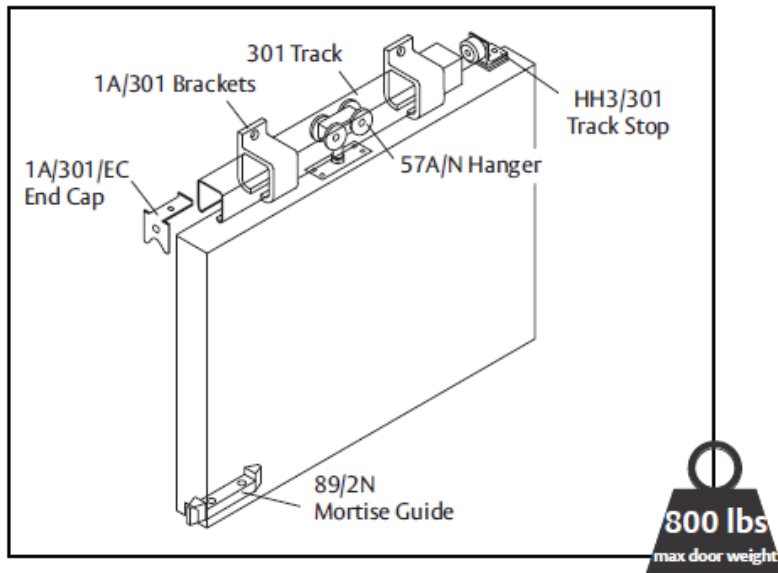

Part Number	Material	Track Length	Door Width
H800S-SW/6	Steel	72"	36"
H800S-SW/8	Steel	96"	48"
H800S-SW/10	Steel	120"	60"
H800S-SW/12	Steel	144"	72"

Side Wall Mount

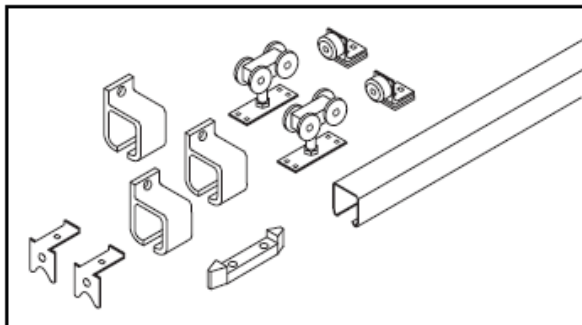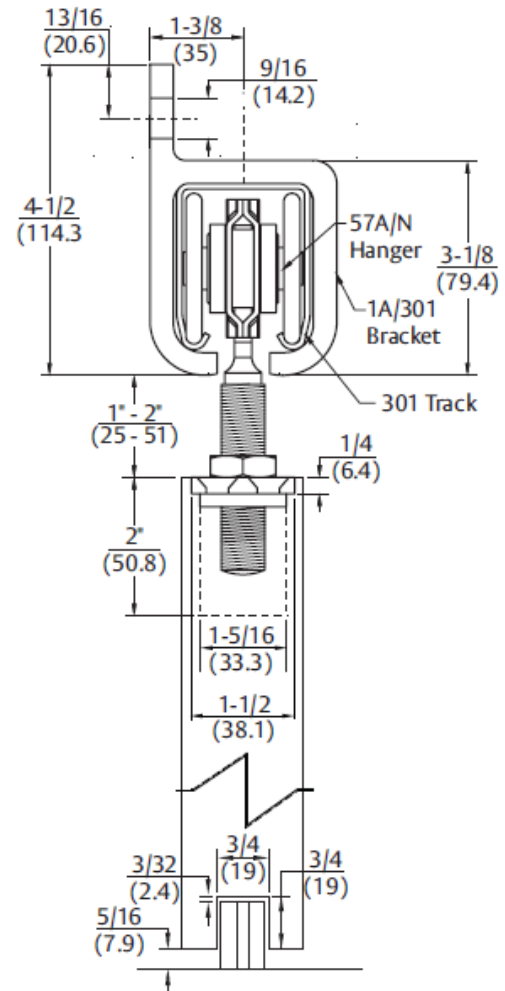

H800S-SW Kits Include:

- 1 ea 301 Galvanized Steel Track
- 1A/301 Aluminum Alloy Side Wall Mount Track Brackets (One at each end and no more than three feet in between)
- 2 ea 1A/301/EC Aluminum Alloy End Caps
- 2 ea 57A/N Zinc Coated Steel Body, Nylon Wheels, and Pendant Bolt
- 2 ea Hangers
- 1 ea HH3/301 Galvanized Steel In-Track Stops
- 89/2N Gray Nylon Mortise Guide



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com



**TRADEMARK
HARDWARE**


WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

1. Install brackets.


Slide brackets onto track. Inward brackets should be 2' (61m) from each end and centered on track.

Do not install end brackets with end caps at this time.

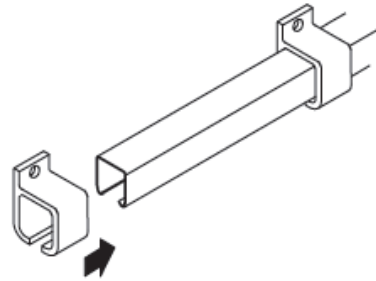



2. Secure track to wall.

Ensure track is plumb and level.

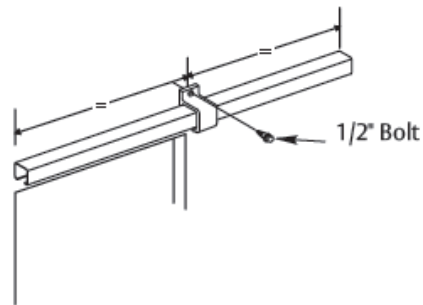


3. Mortise door for door guide.

Attach a plumb line to hanger. Remove one end bracket. Place hanger inside track. Using plumb line, mark the centerline of door guide.

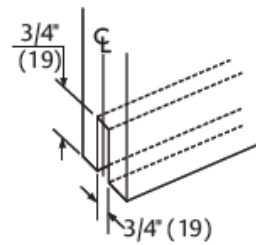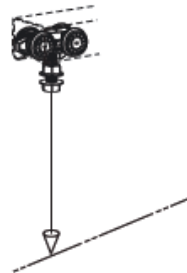

4. Fit door guide to floor.

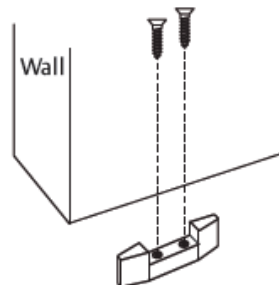

www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE


INSTALLATION GUIDE

5. Prepare top of door for hanger hardware.

- ① Drill $1\frac{5}{16}$ " (33.3) dia. x 2" (50.8) deep hole 8" (203.2) from door edge to centerline of hole and centered in thickness of door.
- ② Route door for $\frac{1}{4}$ " (6.4) thick, $7\frac{5}{16}$ " (185.7) long, and $1\frac{1}{2}$ " (38.1) wide plate centered on centerline of hole and thickness of door.

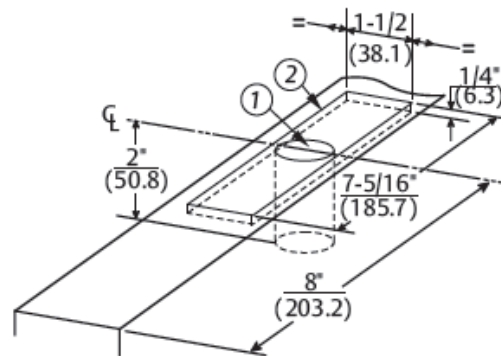


6. Attach hangers to doors.

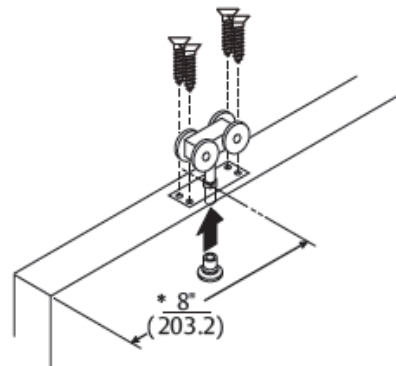

*From door edge to centerline of hanger bolt and plate.

7. Hang door.

Slowly guide complete door unit into track using installed floor guide. Install track stops.

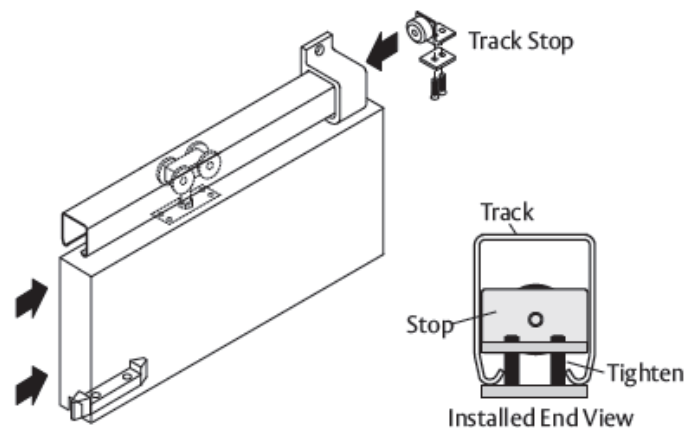




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

8. Install end bracket caps.

Replace end brackets onto ends of track with end caps in position.
Check for smooth operation. Adjust and tighten stops.

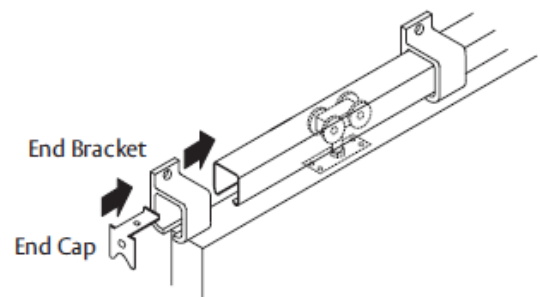

IMPORTANT:

Visually check all bolts and screws; tighten if necessary.
If access door is installed, check operation.
Check operation of doors for ease.

- Door catches floor guide: Check that the track is level. Ensure that the track and floor guide are parallel to within $\pm \frac{1}{8}"$ (3).
- Door scrubs: Check that the door is level on hangers.
- Door moves while in operation: Check hangers are installed correctly.

