






**Trademark
HARDWARE**

INSTALLATION GUIDE

Tools Required:



Installation Instructions:

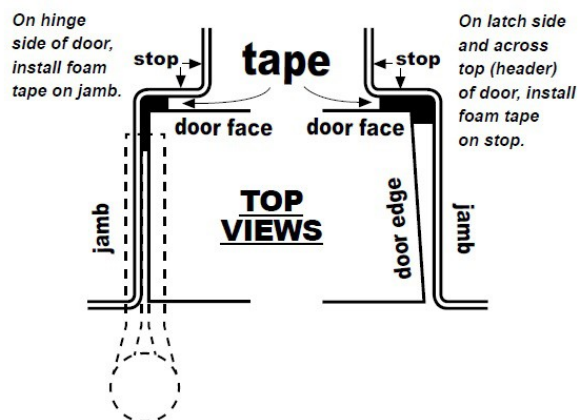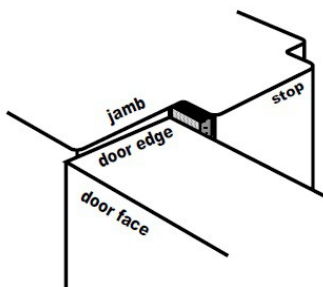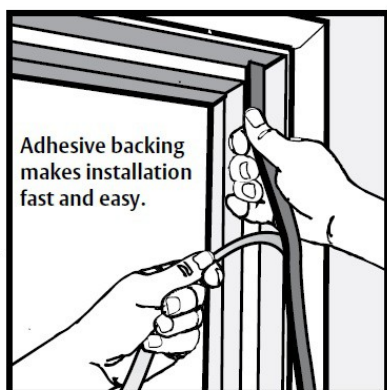

1. Apply to clean, dry surface.
2. Peel protective backing from starting end of roll.
3. Locate and press end of tape in place.
4. Working the length of tape, press in place as you continue to remove protective backing.
5. As you approach desired length, cut to fit before removing all the protective backing.