





**Trademark  
HARDWARE**

# INSTALLATION GUIDE

## INSTALLATION INSTRUCTIONS:

### FITTING THE RAMP TO THE OPENING:

1. Prior to adhesive attachment, the Pemko Recycled Rubber Ramp™ should be coped, trimmed, and/or planed as required.
2. If the ramp is too tall, it can be reduced in height to obtain the desired offset height. The glue grooves in the bottom can also serve as cutting guides. (See Figure 1 below with typical height cut-downs).

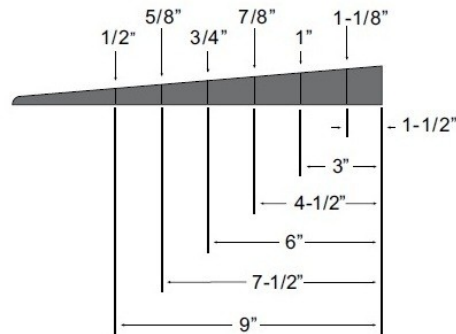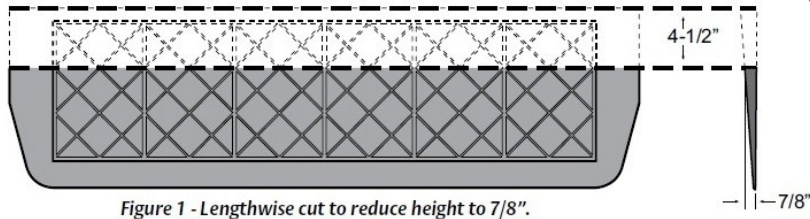

3. Figures 2a & 2b: Coping to fit the opening is easily accomplished with a hand saw or power jigsaw.

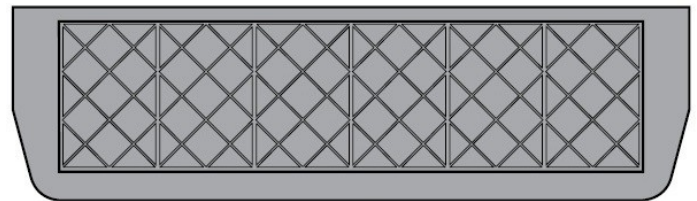
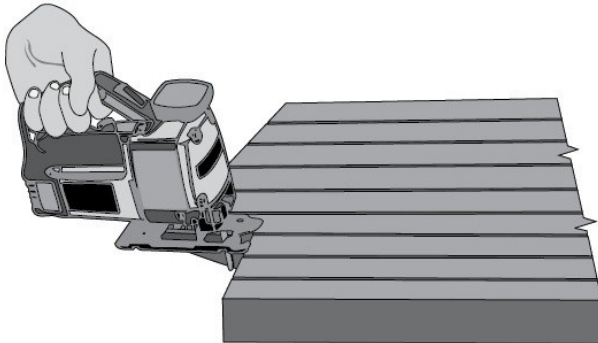


Figure 2b

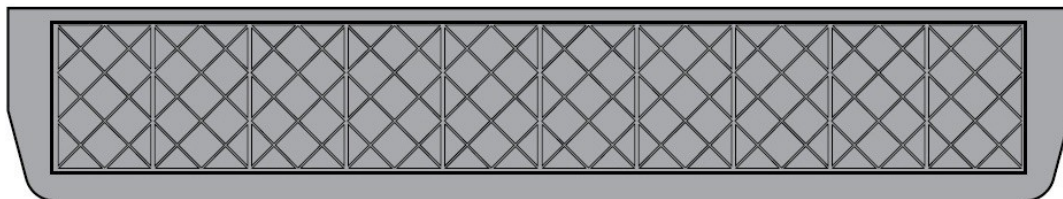


Figure 3 - Wider, two-piece ramps accommodate the door opening side extension required by ADAAG and other codes.

4. When the fitting is complete, the ramp is ready to be bonded in place with adhesive. Pemko strongly recommends using RR200 Adhesive. Recommended quantity of adhesive is one 9.8 oz. cartridge for each 7 sq. feet of ramp.

### Tools Required



[www.pemko.com](http://www.pemko.com)



**WARNING! DO NOT ATTEMPT TO CUT THIS MATERIAL WITH ROTATING SAW BLADES OF ANY TYPE, INCLUDING HAND CIRCULAR SAWS AND MACHINE TOOLS. THEY CAN GRAB THE MATERIAL CAUSING SUDDEN KICKBACKS OR JAMS WHICH MAY CAUSE SERIOUS INJURY.**