

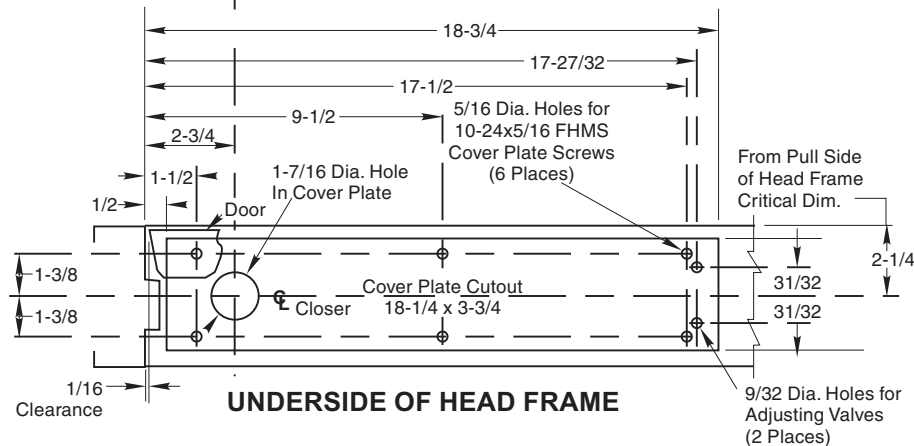
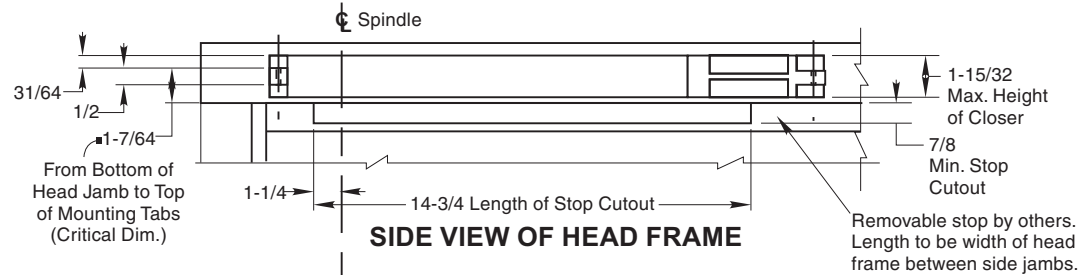
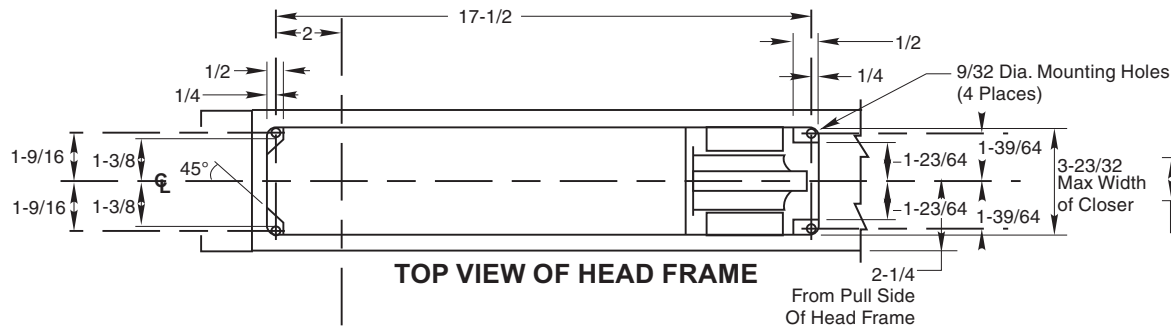


**M0700 Overhead Concealed Closer
Offset Hung
Metal Doors and Frames
2" x 4-1/2" Minimum Head Frame**

HEAD FRAME INSTALLATION

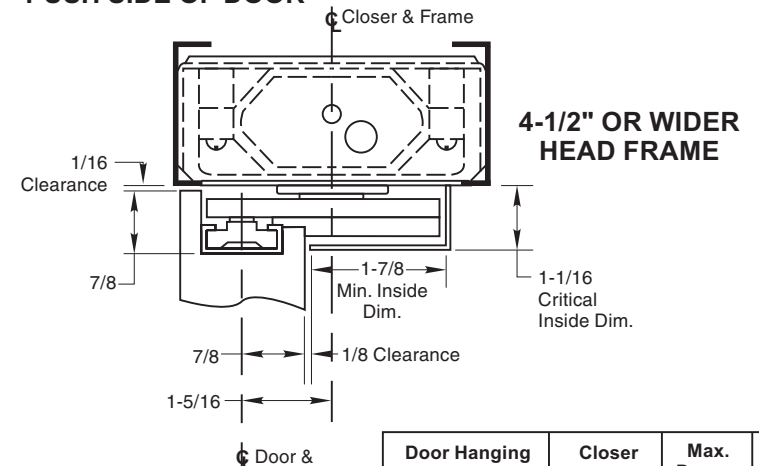

DOOR INSTALLATION

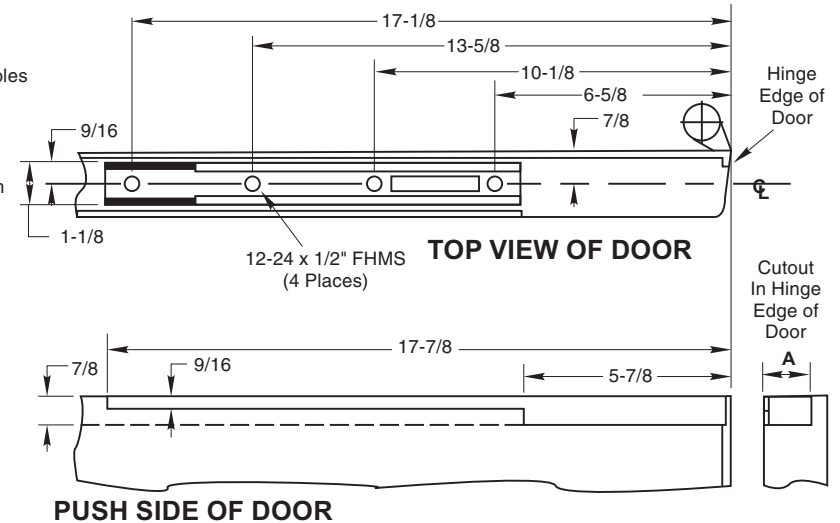

Notes:

1. Do not scale drawing.
2. Right hand shown.
3. For use on doors with a minimum 7/8" deep top web. DO NOT use this template for head frames less than 2"x4-1/2" wide.
4. No. 0192 mounting channel included. See template OC60200.
5. All dimensions are in inches.

Door Hanging Method		Closer No.	Max. Degree	Dim. "A"
Butt Hinge	4 x 4	M070090 M0700105	86° 106°	7/8
	4-1/2 x 4-1/2	M070090 M0700105	88° 108°	7/8
3-4 Offset Side Jamb Pivot		M070090	93°	7/8
		M0700105	113°	1-5/8