

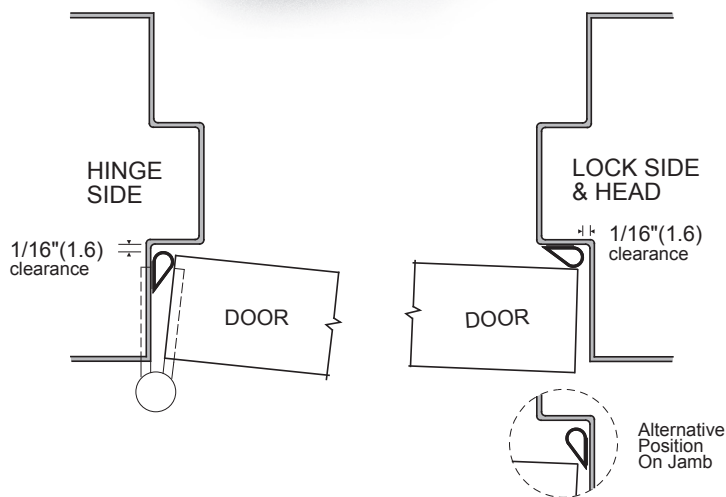


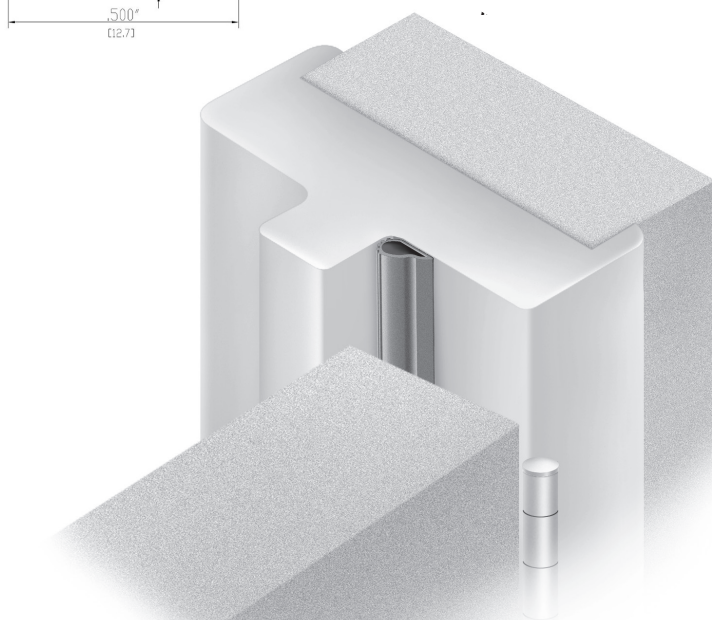

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

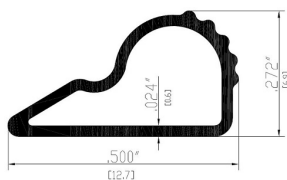

Installation Guide

Pure Silicone Adhesive Weatherstrip

Installation Tips:

- **SURFACE:** A clean surface is required to ensure optimal adhesion.
- Check the frame where the gasketing is to be applied for any impediments, such as dust, dirt, grease or loose paint and remove thoroughly.
- Solvent cleaner or any common soap may be used. Ensure the surface has completely dried before beginning installation.
- Gasketing should be installed after the doors and frames have been painted and the paint has dried.
- **EFFECTIVE TEMPERATURE:** This gasket is best applied at a temperature range of 70 to 90°F (21 to 32°C). Do not apply if temperature falls below 50°F (10°C) or exceeds 100°F (38°C).

To Install

1. Measure and cut the gasket to fit the head and jambs. The first piece of gasketing should be the head piece and applied on the entire length of the head. Remove the paper backing of self adhesive strip (PSA) about 1' to 2' (304.8 to 609.6mm) at a time. Align and install gasketing into place. Press firmly for proper adhesion.

IMPORTANT: DO NOT STRETCH THE SEAL DURING INSTALLATION.

2. The lock jamb gasketing should be installed next, following procedures as outlined in step 1.
3. Install the hinge jamb gasketing last, following procedures as outlined in step 1.
4. After installation, check to make sure the gasketing does not obstruct the operation of door.



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com