

HAGER 9614 AND 9683 BYPASS SETS




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE




INSTALLATION GUIDE

CONTENTS	9614	9683
1. TRACK (9820)	1	1
2. CARRIER B OFFSETS (9401)	4	6
3. PULL (2610)	2	3
4. FLOOR GUIDE (9353)	1	2
5. #8 X 3/4" PPHS	13	26
6. #8 X 1-1/4" PPHS	7	14
7. DOORSTOP (9880) (sold separately)	1	1

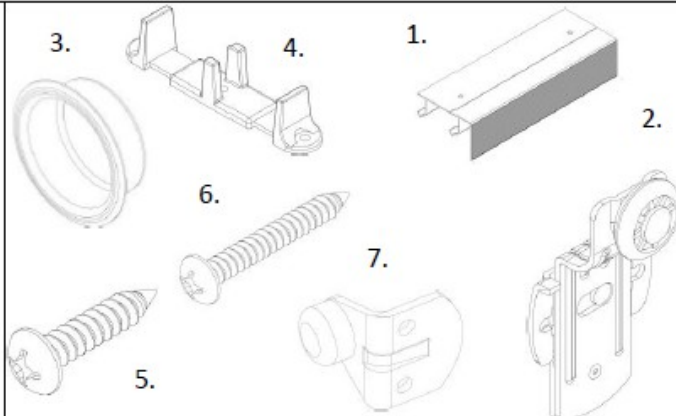

1 PREPARE OPENING

OPENING HEIGHT MAX = DOOR HEIGHT + 2-1/4"
OPENING HEIGHT MIN = DOOR HEIGHT + 1-3/4"

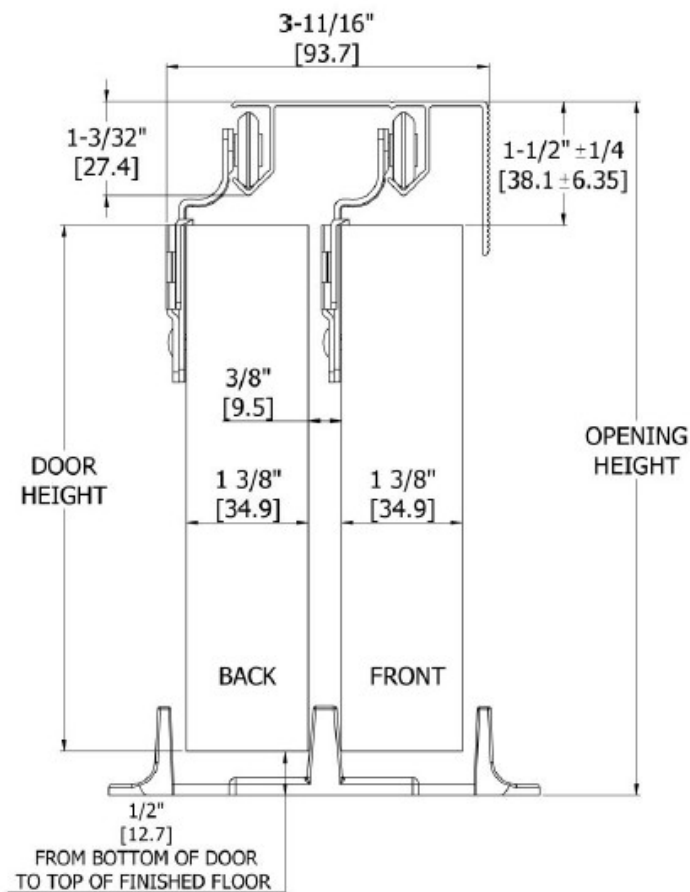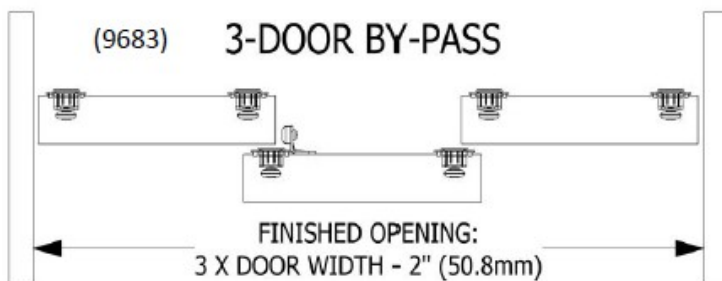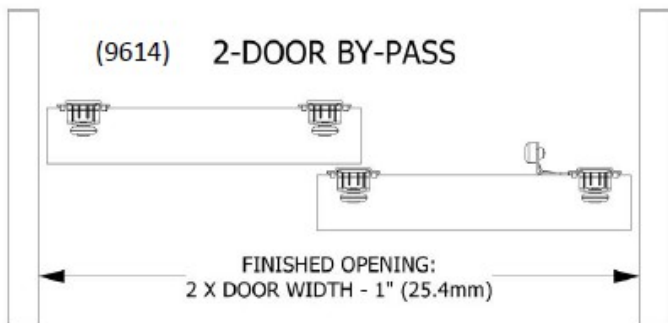

www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com

HAGER 9614 AND 9683 BYPASS SETS




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE


2 INSTALL TRACK AND HANGERS

- Center track in opening and secure with (#8x1-1/4") screws
- Center first drill hole 1/2" from edge of door
- Secure Carriers onto door with (#8x3/4") screws

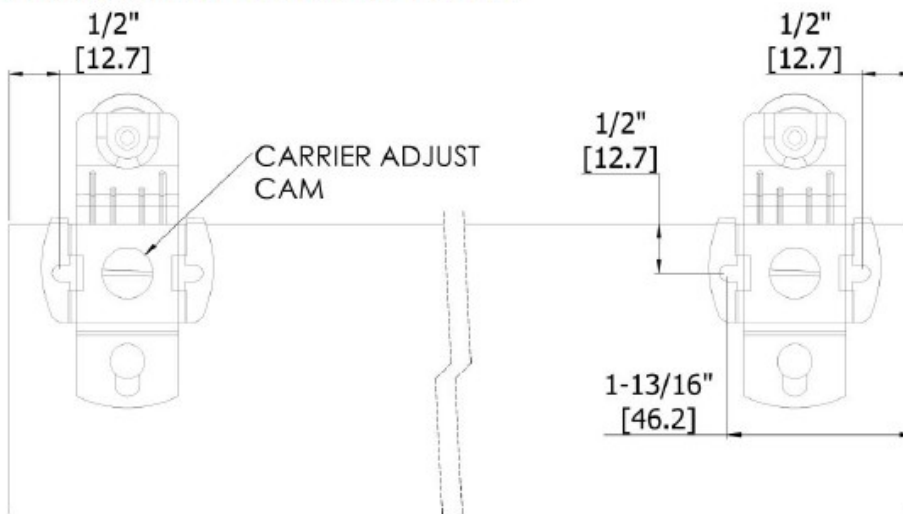


3 HANG DOORS

- Mount rear door first by tilting door back and resting carrier wheels on rear rail
- Repeat for front door on front rail

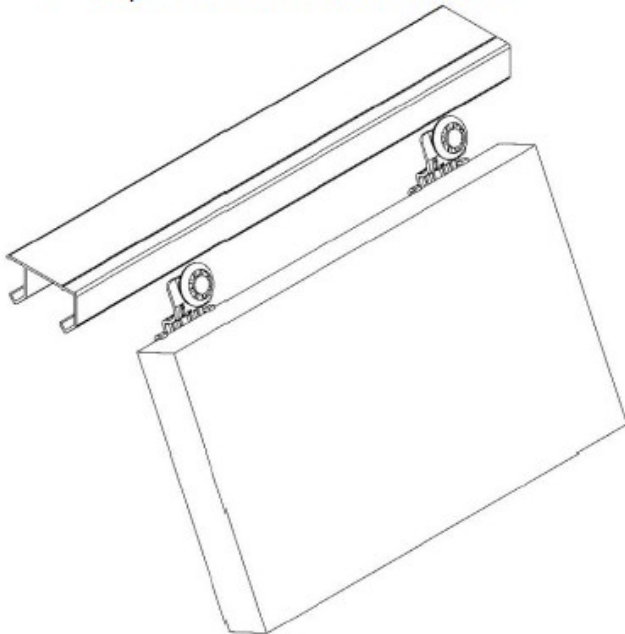

4 ADJUST AND FINISH

- Adjust carriers so door is square with frame
- Install door guides in center of opening, where doors overlap
- Drill 3/4" diameter hole 3/8" deep to mount door pull
- Install stops (optional)

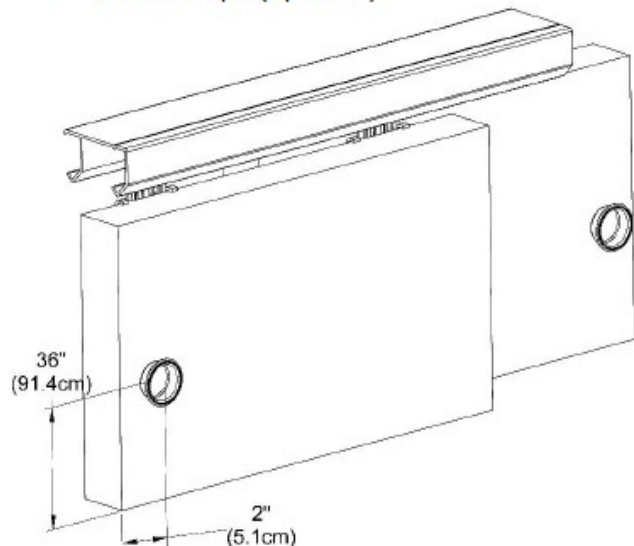

www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com