




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE


# INSTALLATION




## INSTRUCTIONS

1. Rough opening width changes to four times one door width.

2. Cut 3/4" (19.05mm) off "doorway end of Header Assemblies.

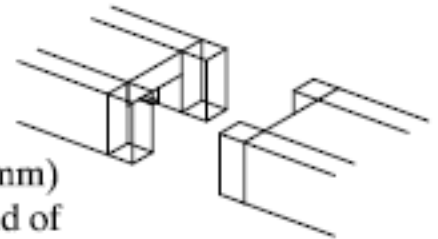


3.

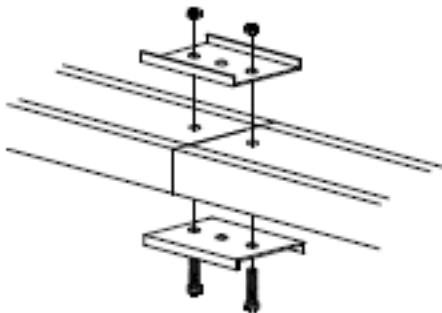

Butt sawed ends together and fasten using brackets in this kit as illustrated. Drill 1/4" (6.35mm) holes for the 2 machine bolts and one in center for lag screw.


4.

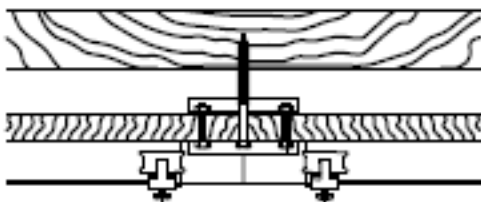

Hang combined assembly and fasten to rough header with center lag screw. Adjust to level.

5.

Install center stop bumpers into ends of track. Final adjust after doors are in place.

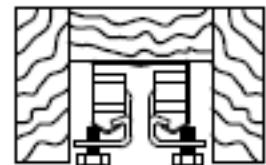

6.

Install doors per instructions with Pocket Door Frame.

**SKU: H9639**

