

# 9885 AND 9886 BY PASS SETS




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE



## INSTALLATION

CONTENTS	9885	9886	
1. TRACK (9801)	1	1	
2. CARRIER (9827)	4	8	
3. QUICK RELEASE PLATE(9610)	4	8	
4. FLOOR GUIDE (9909)	1	2	
5. #8 X 5/8" THS	2	2	
6. #8 X 3/4" PPHS	3	6	
7. #8 X 1" PPHS	16	36	
8. #8 X 1-1/2" PPHS	36	36	
9. DOORSTOP (9815)	1	1	
10. PULL	2	4	
(Sold separately)			

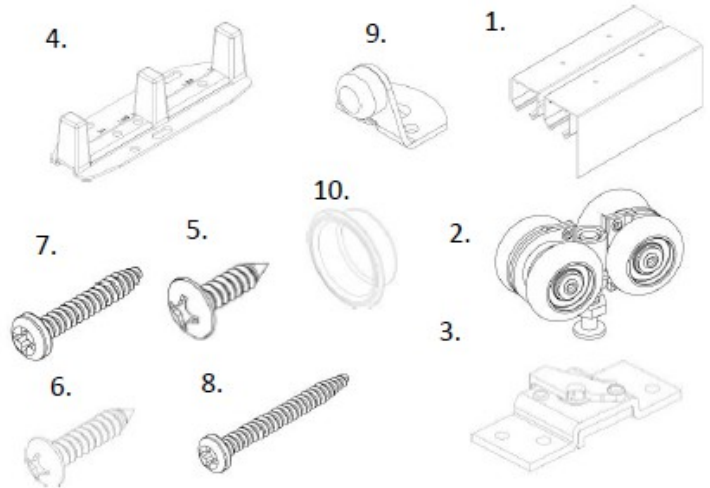

### 1 PREPARE OPENING

OPENING HEIGHT MAX = DOOR HEIGHT + 3-5/8"  
OPENING HEIGHT MIN = DOOR HEIGHT + 3"

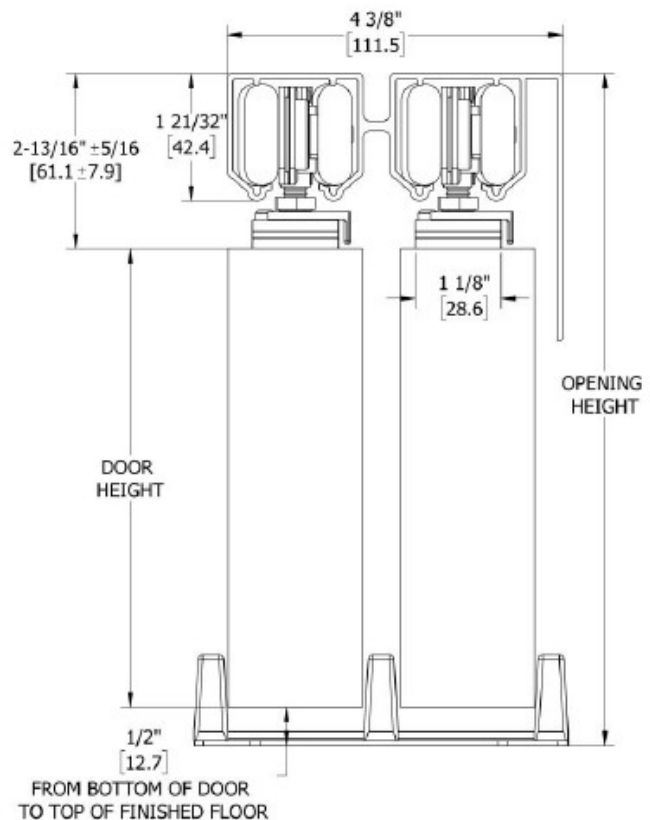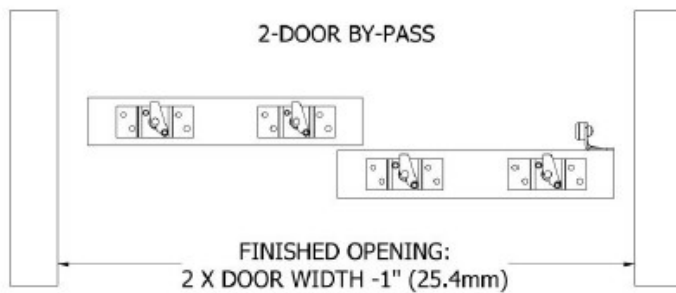



**TRADEMARK  
HARDWARE**



WORLD OF QUALITY HARDWARE

# 9885 AND 9886 BY PASS SETS

## INSTALLATION


### 2 INSTALL TRACK AND HANGERS

- Center tracks in opening, secure with (#8 x 1-1/2") screws
- Leave a 1" gap between right end of track and door frame to allow for carrier removal
- Center quick release plates on door thickness
- Mount left plate edge 1" from near left door edge
- Mount right plate 2-3/4" from near right door edge
- Secure Carriers onto door with (#8 x 1") screws

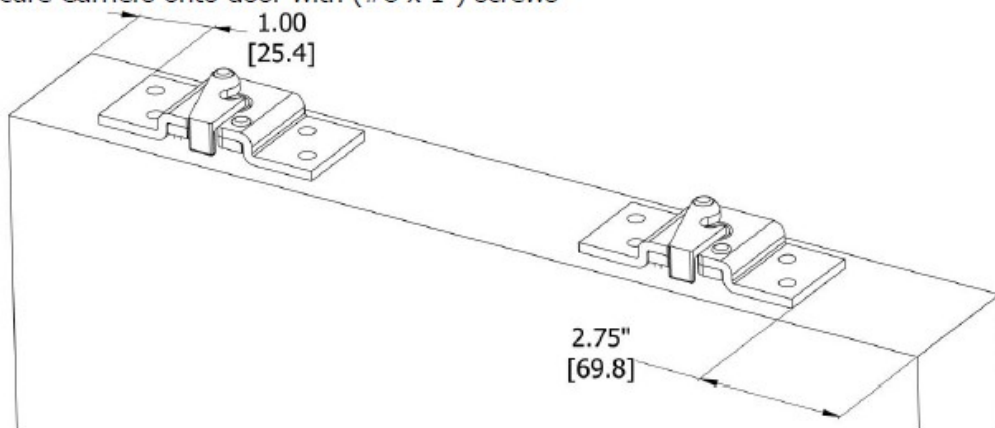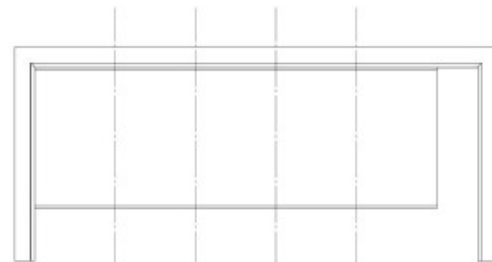

### 3 HANG DOORS

- Open quick release latches on brackets
- Slide door onto carrier and close hatch
- Repeat for front door on front rail

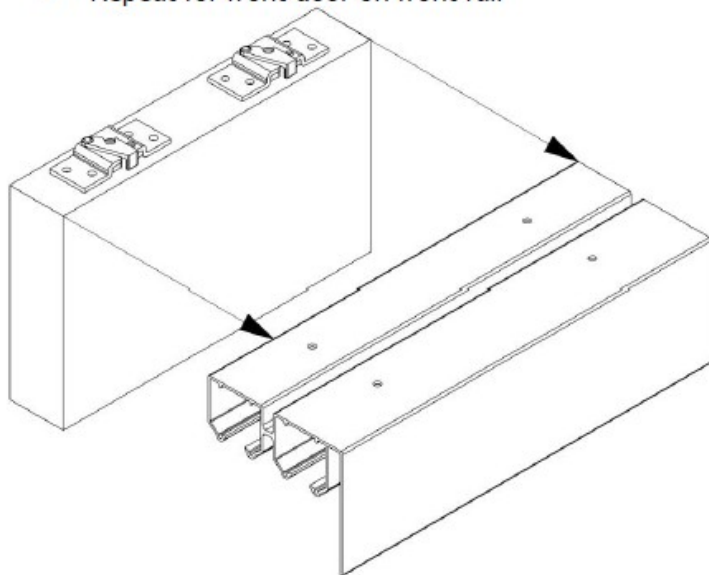

### 4 ADJUST AND FINISH

- Adjust carriers so door is square with frame
- Install door guides in center of opening, where doors overlap using (#8 X 1-1/2") screws
- Drill appropriate dimensioned hole to mount door pull (optional)
- Install stops (optional)

