





**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE


INSTALLATION GUIDE

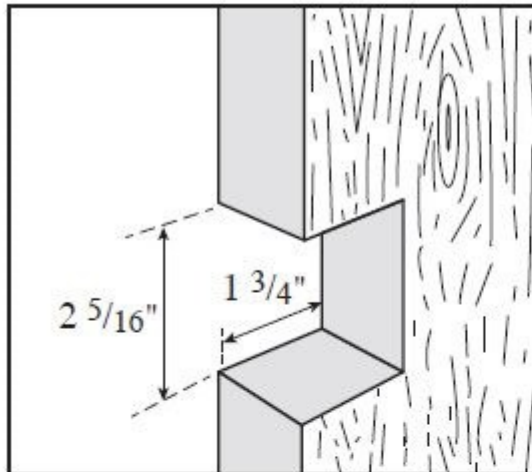

Cut one simple notch in edge of door.

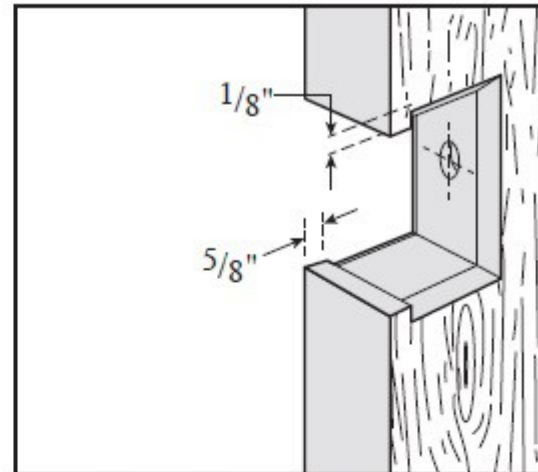

Notch edge for relief of dished grip.

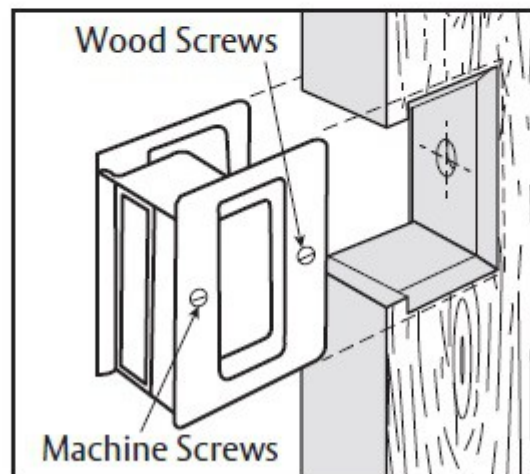

Slide pull into cutout. Make it flush with edge of door. Tighten machine screws. Insert #6 x 5/8" oval head wood screws.

