







**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

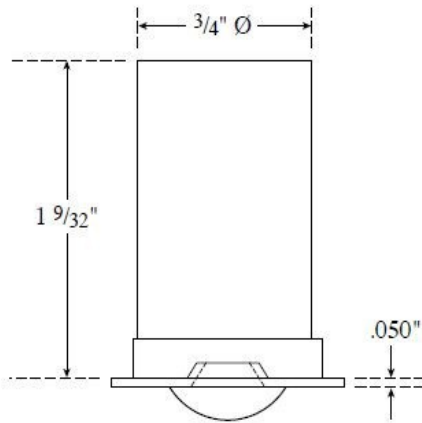

NOT TO SCALE

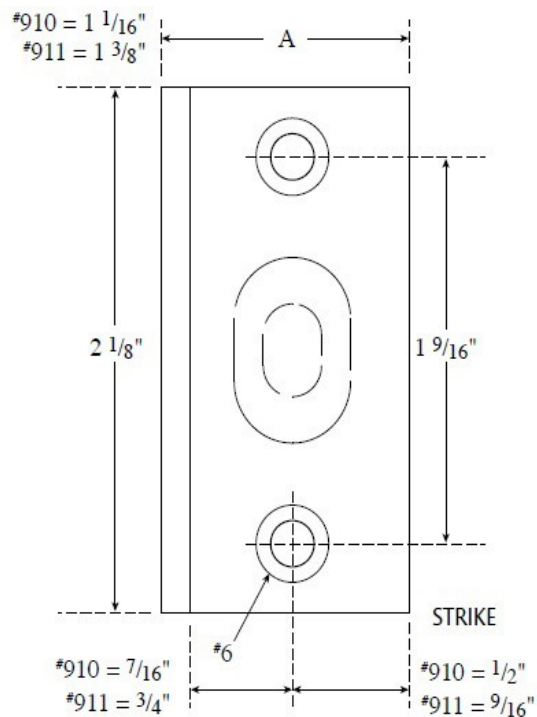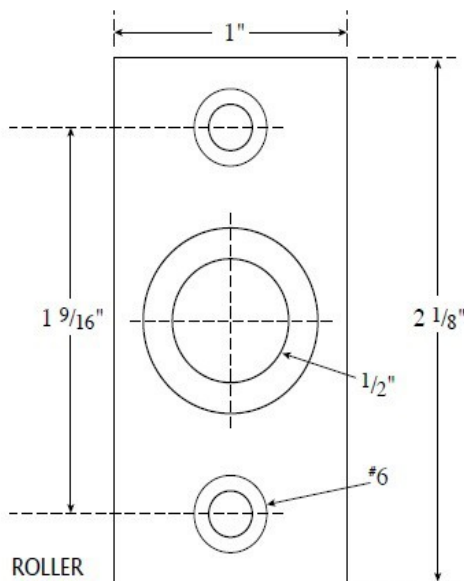

Installation Instructions

#910 (Designed for cabinet doors)

1. Mortise edge of door and center strike on door edge. Mount to door edge with #6 screws.
2. Find corresponding center for latch on frame and drill $\varnothing 3/4"$ hole x $1 3/8"$ dp. Mortise frame and mount with #6 screws.

#911 (Designed for $1 3/8"$ doors)

1. Find center of door width and drill $\varnothing 3/4"$ hole x $1 3/8"$ dp. Mortise edge of door and install with #6 screws.
2. Measure $1 1/16"$ from edge of frame to locate strike screw mounting. Mortise frame and mount with #6 screws.

Fasteners Included: 4 ea. #6 x $3/4"$
Flat Head Sheet Metal Screws



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com