



**Trademark
HARDWARE**

INSTALLATION GUIDE

18BFB Bottom Fire Bolt




INSTALLATION INSTRUCTIONS

Inactive Door

1. Measure 4" to 6" from bottom of the Inactive Door.
2. Drill a 9/16" dia. hole for 18BFB.
3. Install 18BFB by striking squarely with a hammer.

Active Door

1. Drill a 1-3/32" dia. hole for Plug at the same height as the 18BFB.
2. Install plug in door by striking with a hammer.

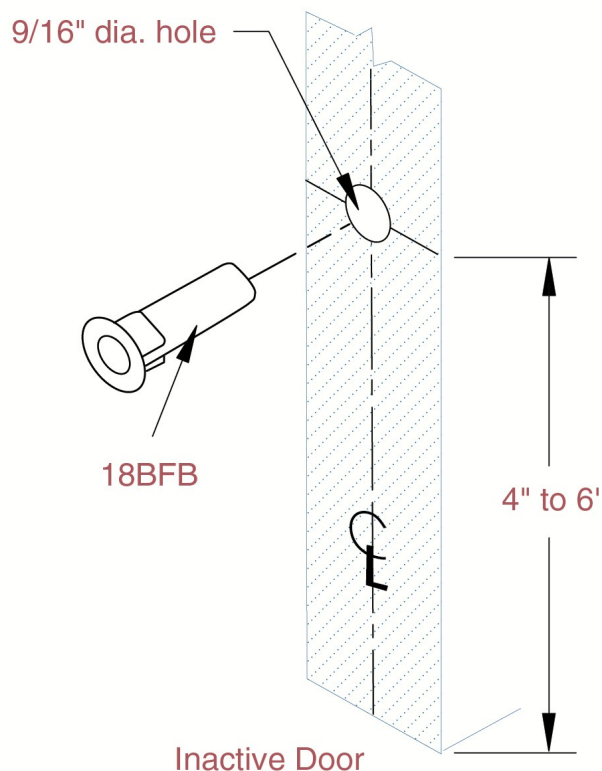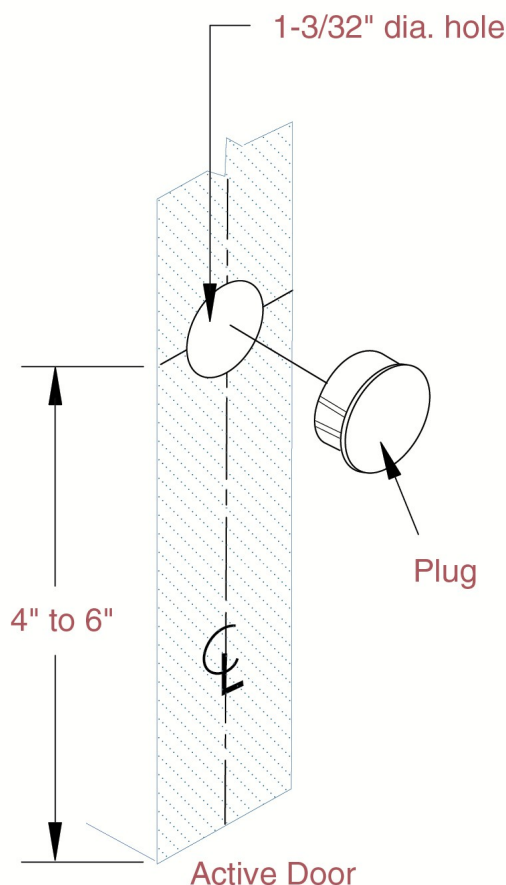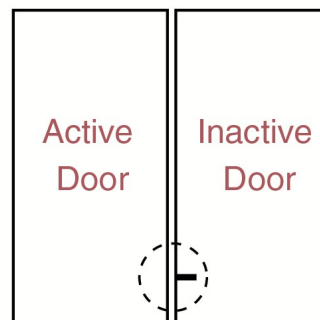

IMPORTANT: The 18BFB will project during a fire. Do not cover with any edge mounted door hardware.

Not To Scale