



**Trademark
HARDWARE**

INSTALLATION GUIDE

19BFB Bottom Fire Bolt



INSTALLATION INSTRUCTIONS

Inactive Door

1. Measure 4" to 6" from bottom of the Inactive Door.
2. Drill a 9/16" dia. hole x 1 5/8" deep for 19BFB.
3. Install 19BFB by striking squarely with a hammer.

Active Door

1. Drill a 1" dia. x 1-1/4" deep hole for Plug at the same height as the 19BFB.
2. Install plug in door by striking with a hammer.
3. For zero clearance doors, counterbore 1-1/4" dia. x 1/16" deep for plug.

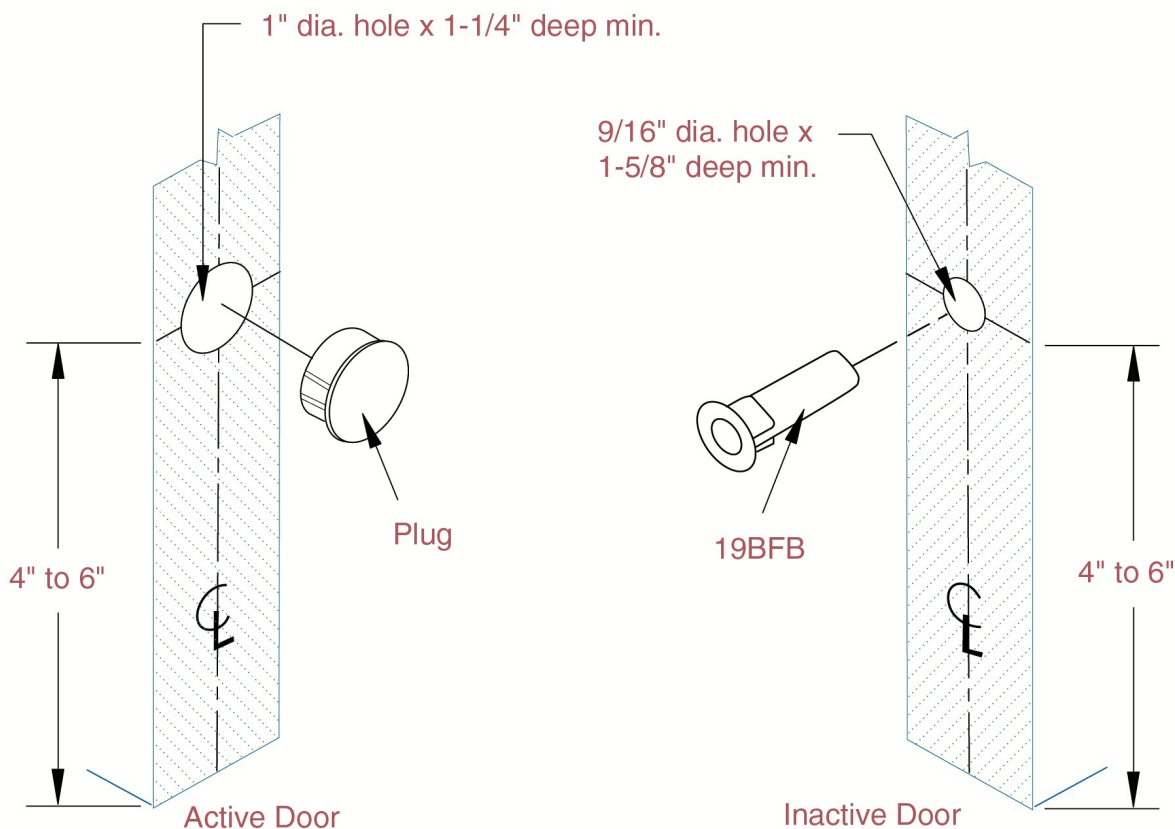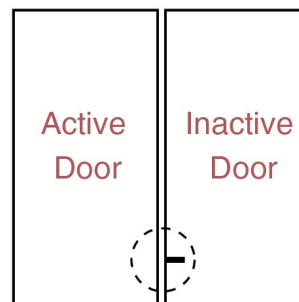

IMPORTANT: The 19BFB will project during a fire. Do not cover with any edge mounted door hardware.

Not To Scale