

RIXSON®

ASSA ABLOY

Wiring Instructions

99 Checkmate® Series with Single Point Hold-Open

Combination Door Closer-Holder and
Releasing Device with or without
Integral Smoke Detector

**INSTALLER:
LEAVE
INSTRUCTIONS WITH
BUILDING OWNER**

CAUTION TO PREVENT ELECTRICAL SHOCK AND
EQUIPMENT DAMAGE, DISCONNECT ALL
POWER BEFORE BEGINNING.
MAXIMUM WIRE SIZE IS 18 AWG.
ALL WIRING MUST COMPLY WITH
APPLICABLE LOCAL ELECTRICAL CODES,
ORDINANCES, AND REGULATIONS. **CAUTION**

99 Checkmate® Series



Master Unit - 99-626 / 99-826

Support Unit - 99-726 / 99-926

Single Doors

99 Checkmate® Series

Use one "99-626" or "99-826" Master Unit each door
or one "99-726" or "99-926" Support unit each door

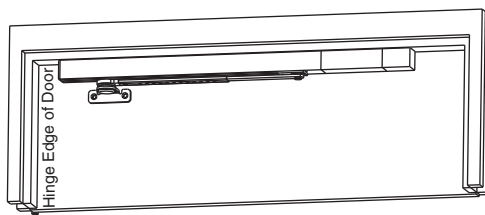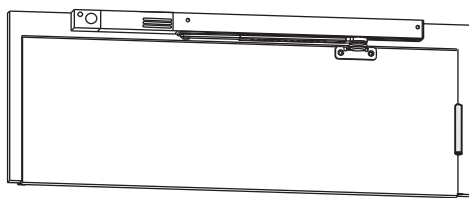


Pairs of Doors


99 Checkmate® Series

Use one "99-626" or "99-826" Master Unit and
one "99-726" or "99-926" Support Unit for each door leaf
(24VDC "99-726/99-926" Support Unit must be used with "99-626/99-826" Master Unit)

"99-826" Master Unit shown

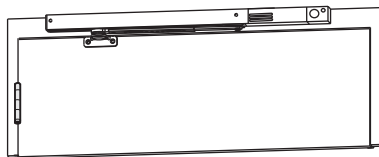


24VDC "99-926" Support Unit
shown

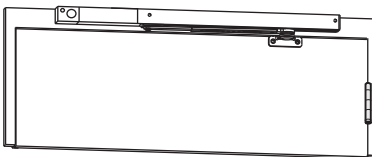

24VDC "99-726" Support Unit
shown



"99-626" Master Unit shown

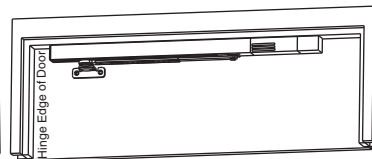

CAUTION:

1. Failure to install or adjust properly may result in injury or damage.
2. Disconnect all power before beginning installation to prevent electrical shock and equipment damage.
3. All wiring must comply with applicable local electrical codes, ordinances, and regulations.
4. Maximum wire size is 18AWG.
5. These units are not to be used in limited open area applications.

REQUIREMENT:

Power input to unit must be of the same voltage as that listed on the product label:

24VDC for systems where the power input to both the integral smoke detector and the door holder solenoid is supplied from the same circuit (see Pages 4 and 6 thru 8 of these instructions).



Wiring Instructions

RIXSON®

ASSA ABLOY

Unit Examples:

99 Checkmate® Series:

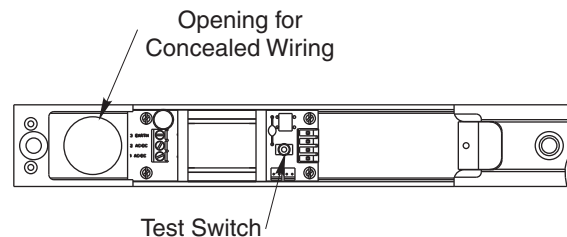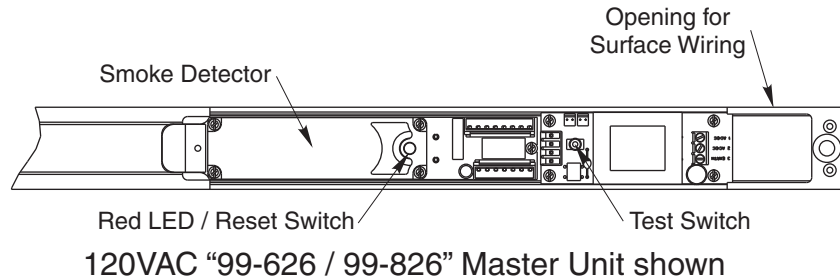

WARNING:



Life safety devices require correct positioning and appropriate selection for the required task. It is the responsibility of the purchaser to select appropriate hardware and provide professional installation. It is the responsibility of the purchaser to insure that NFPA and other applicable fire codes are met. Door release devices function properly only if the door is free to close and is installed correctly.

Smoke detectors will not work without power. AC or DC powered smoke detectors will not work if the power supply is cut off for any reason.

These fire protection devices require correct wiring to function. Devices wired incorrectly may be damaged and therefore not covered under warranty.

All high voltage wiring should be undertaken by a qualified professional licensed electrician. It is the responsibility of the purchaser to insure that installation meets all applicable local and national electrical codes. A detector may not detect a fire developing on another level of a building. For this reason, detectors should be located on every level of the building.

Smoke detectors will not sense fires which start where smoke does not reach the detectors. Smoke from fires in chimneys, in walls, on roofs, or on the other side of a closed door may not reach the smoke detector and activate it.

Smoke detectors cannot last forever. Smoke detectors contain electronic parts. Even though detectors are made to last over 10 years, any of these parts could fail at any time. Therefore, test your smoke detector system per NFPA 72 Chapter 10 at least semiannually. Clean and take care of your smoke detectors regularly. Refer to Page 5 of these instructions for "Smoke Detector Cleaning and Testing". Taking care if the fire detection system you have installed will maintain the reliability of the system.

Smoke detectors have sensing limitations. Smoke detectors used in high air velocity conditions may fail to alarm due to dilution of smoke densities created by such frequent and rapid air exchanges. Additionally, high air velocity environments may create increased dust contamination, demanding more frequent maintenance.

Smoke Detector Terminal Inputs and Outputs

24V input power is applied to terminals 3 (-) and 14 (+) from the circuit board. The red LED flashes every 8 seconds.

Terminals 1 and 2 provide a normally open (alarm) contact. This contact closes when smoke is detected. The red LED illuminates continuously.

Terminals 5 and 13 provide a normally closed supervisory (trouble) contact. This contact opens when power is lost to the detector circuitry. The red LED stops flashing and does not illuminate.

Terminals 6 and 9, if used, provide rectified, unfiltered 24VDC power to an additional door holder solenoid. In an alarm condition, power is removed and the door closes.

Terminals 7 and 8, if used, provide rectified, unfiltered 24VDC power to auxiliary devices when the detector alarms.


Terminal 10 is 24VDC Positive output. It is continuous, rectified, unfiltered 24VDC power used for remote detector interconnect applications.

Terminals 4 and 15 provide interconnections to other detectors (see diagram on Page 8). Up to five smoke detectors may be interconnected. When a single detector alarms, terminal 15 goes high and all interconnected smoke detectors will release their doors. The unit that initiated the alarm will have its LED on. The LED on the other interconnected units will flash as normal. Refer to Interconnection Wiring Diagram for connections.

CONNECTION LIST

FUNCTION	TERMINAL
24VDC input	3 (-), 14 (+)
Alarm Contacts	1, 2
Latch (+)	9
Latch (-)	6
Aux (+)	8
Aux (-)	7
Interconnect (+)	15
Interconnect (-)	4
SOLENOID (+)	9
Trouble contacts	13, 5
+24VDC output (unfiltered)	10

NOTE: Terminals 4, 6, and 7 are same point

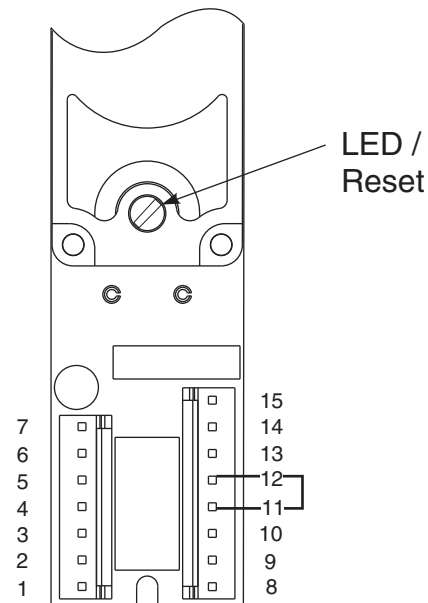

Detector Specifications:

Type: Photo-Electric Smoke Detector complies with UL 228 and UL 268 standards.

Power Requirements: 24VDC +/- 10%.

Normal Sensitivity: 2.325 +/- 1.055% / FT.

Contact Ratings:

Alarm and / or accessories (Resistive Load):

2.0 Amps Max @ 24VDC

0.6 Amps Max @ 120VAC


Trouble Contact (Resistive Load):

0.5 Amps Max @ 24VDC


	Max / Min Voltage	Current - Detector
24 VAC	26.4 VAC Max	0.028 A Standby
	21.6 VAC Min	0.059 A Alarm
24 VDC	26.4 VDC Max	0.034 A Standby
	21.6 VDC Min	0.074 A Alarm
120 VAC	132 VAC Max	0.033 A Standby
	106 VAC Min	0.036 A Alarm

24V AC/DC INPUT CIRCUIT BOARD

(shown with 4-pin jumper for non-detected units)

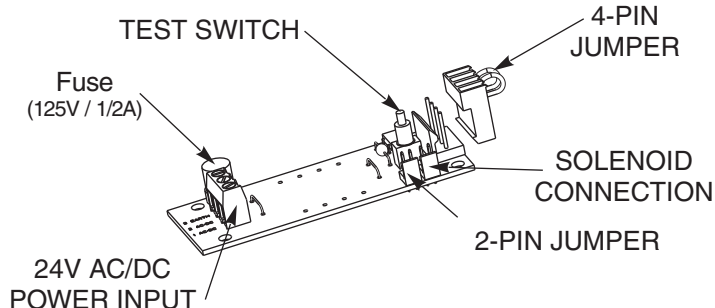


Support Unit Single Station Wiring Diagram (24VAC/DC Input)

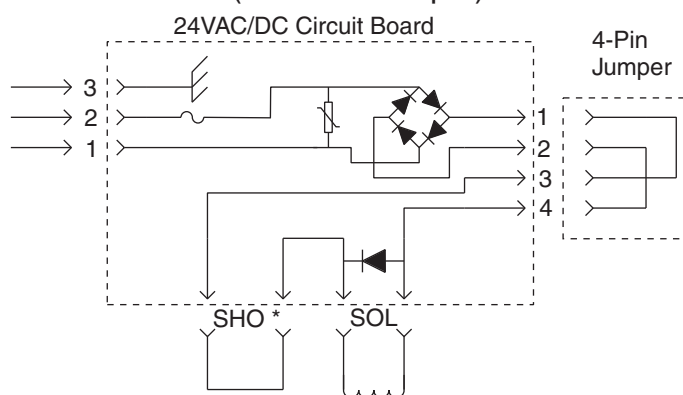


* Replaced By 2-Pin Jumper

120V AC INPUT CIRCUIT BOARD

(shown with Wiring Harness detected units)

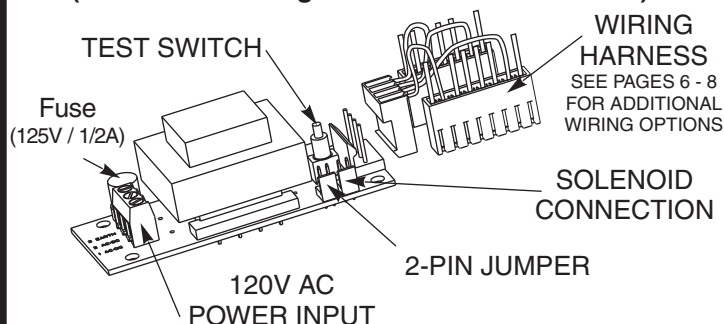


Support Unit Single Station Wiring Diagram (120VAC Input)

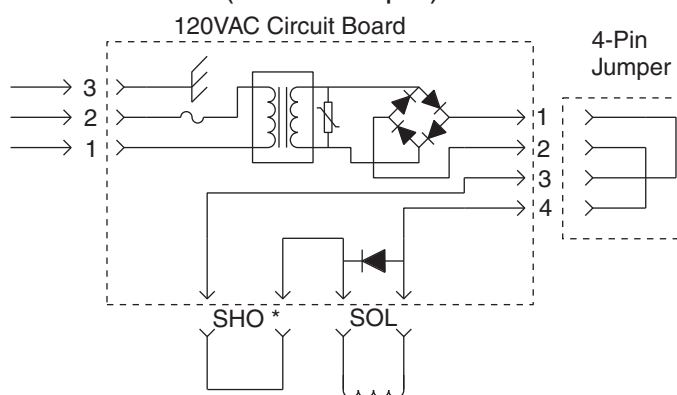


* Replaced By 2-Pin Jumper

Mastert Unit Single Station Wiring Diagram (24VAC/DC Input)

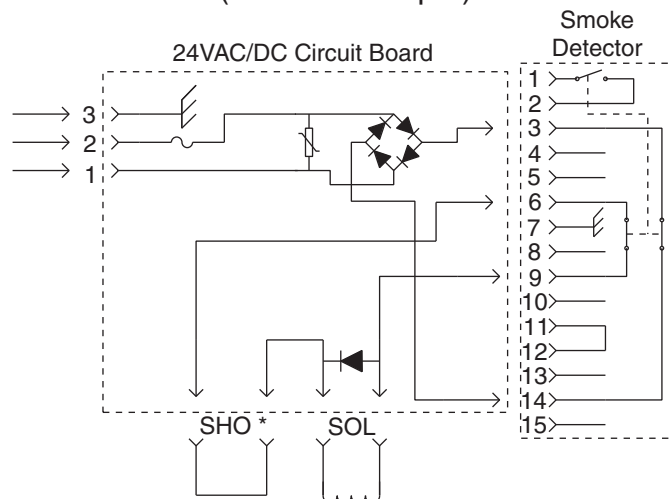

* Replaced By 2-Pin Jumper

Master Unit Single Station Wiring Diagram (120VAC Input)

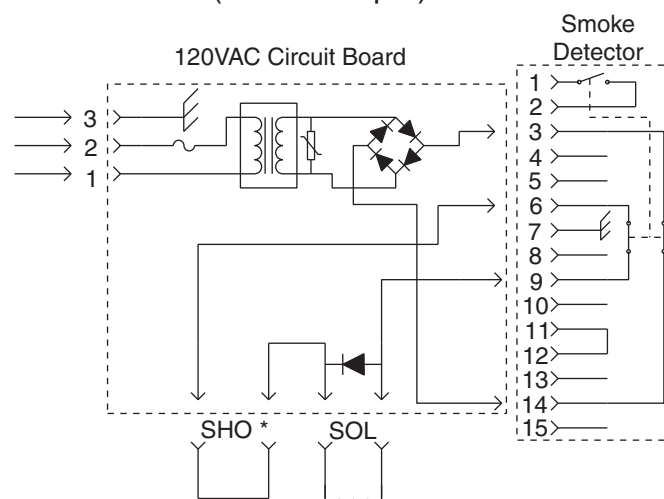

* Replaced By 2-Pin Jumper

All wiring diagrams are shown with circuits energized in stand by mode.

Once alarmed, detector remains in alarm until reset by turning the reset switch on the detector.

Refer to **ANSI NFPA 72** for recommended smoke detector applications.

Environmental limits: 100° F(38° C); 95% relative humidity; not for use where high concentrations of corrosive vapors exist. Do not install where air velocity exceeds 30 ft. per minute.

Wiring Instructions

RIXSON®

ASSA ABLOY

Checking Procedures:

Turn the power to the unit "On". Red LED light should illuminate at 8 second intervals.

Open the door to the hold open point. The door should hold open. Manually pull door out of hold open and release. The door should close.


Open the door to the hold open position. Press the Test / Reset Switch button on the power supply board. Door should close.

Press the Test / Reset Switch button again. Open the door to the hold open position. Inducing smoke into the smoke detector chamber assembly will bring the unit into alarm. The red LED will be continuously illuminated and the door will close. After clearing the smoke chamber, reset the unit as described below.

Resetting Instructions:

Remote Reset: Cycle main power by turning the facility main power supply OFF then ON. NOTE: If there are other units connected to the same power supply, those doors will close. They will have to be reopened returning them to the hold open position.

Local Reset: Insert a small flat head screwdriver through the cover and into the slotted light tube on the smoke detector as shown. Turn screwdriver slightly (about 1/8 turn) **clockwise** until hitting stop and hold for 2 seconds until the Red LED turns OFF. **WARNING: Do not force past the stop. Doing so may damage the smoke detector.**

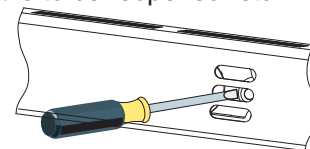

Once the detector is reset and the smoke has cleared, the detector's Red LED should flash once every 8 seconds. The door(s) should hold open now.

Maintenance of Smoke Detectors:

It is recommended to clean smoke detectors at least every six months. The frequency of cleaning will depend upon local ambient conditions.

The smoke detector in this door closer-holder has been enhanced with a feature that detects when a smoke-sensing chamber requires cleaning due to dirt and dust. The need for cleaning is indicated by the flashing of the Red LED once per second.

Normal Supervisory Operation - Red LED flashes once every 8 seconds.

Dirty Chamber needs cleaning - Red LED flashes once every second.

Smoke Detection - Red LED is continuously illuminated.

To clean the smoke detector assembly, follow these instructions: (**NOTE: Before servicing the system, notify the proper authorities that the smoke detector system is undergoing maintenance and will be temporarily out of service. Disable the zone undergoing maintenance to prevent unwanted alarms.**)


Remove detector cover and screen assembly using a standard screwdriver. Turn the screwdriver in the cover slot to loosen the cover and carefully rock the cover back and forth until it snaps out of place. See slot location below. Inspect chamber for particles and dust. Vacuum the screen, cover, and photo chamber. Then use clean, compressed air to loosen and blow out any remaining debris.

Before reassembling the detector, be sure all parts are free of dust and debris.

Replace cover and screen, aligning cover snaps. Press cover onto chamber until it snaps into place.

Measure and record the test voltage at test points **RP1** and **RP2** (see below). If the smoke detector is operating normally and was cleaned effectively, the **test voltage will be greater than .90VDC and less than 1.58VDC**. The test voltage will increase with dust accumulation in the smoke sensing chamber. A difference in test voltages over time will provide an indication of dust accumulation.

Enable the system and inform proper authorities that system is operational.

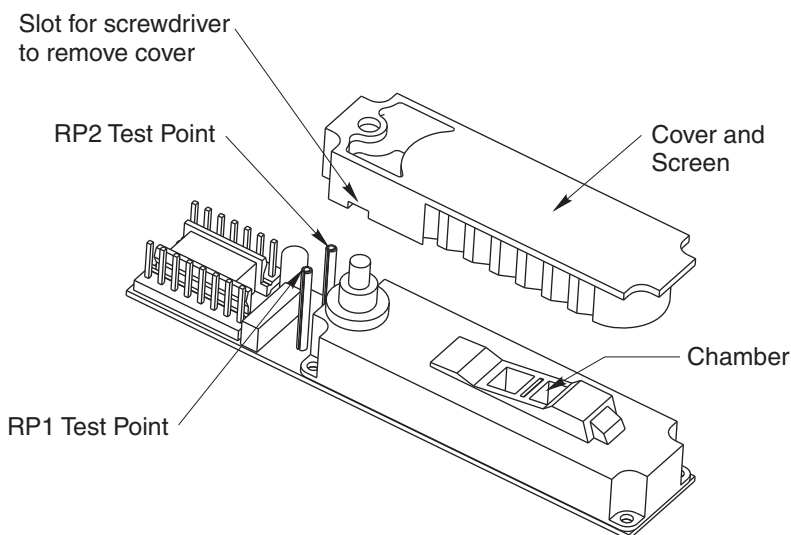

Wiring Instructions


RIXSON®

ASSA ABLOY

MASTER WIRING DIAGRAM FOR 4-WIRE (CLASS A) SYSTEM WITH ALARM PANEL MONITORING

The alarm circuit monitors if smoke is detected

The detector trouble circuit monitors if power is lost to the detector.

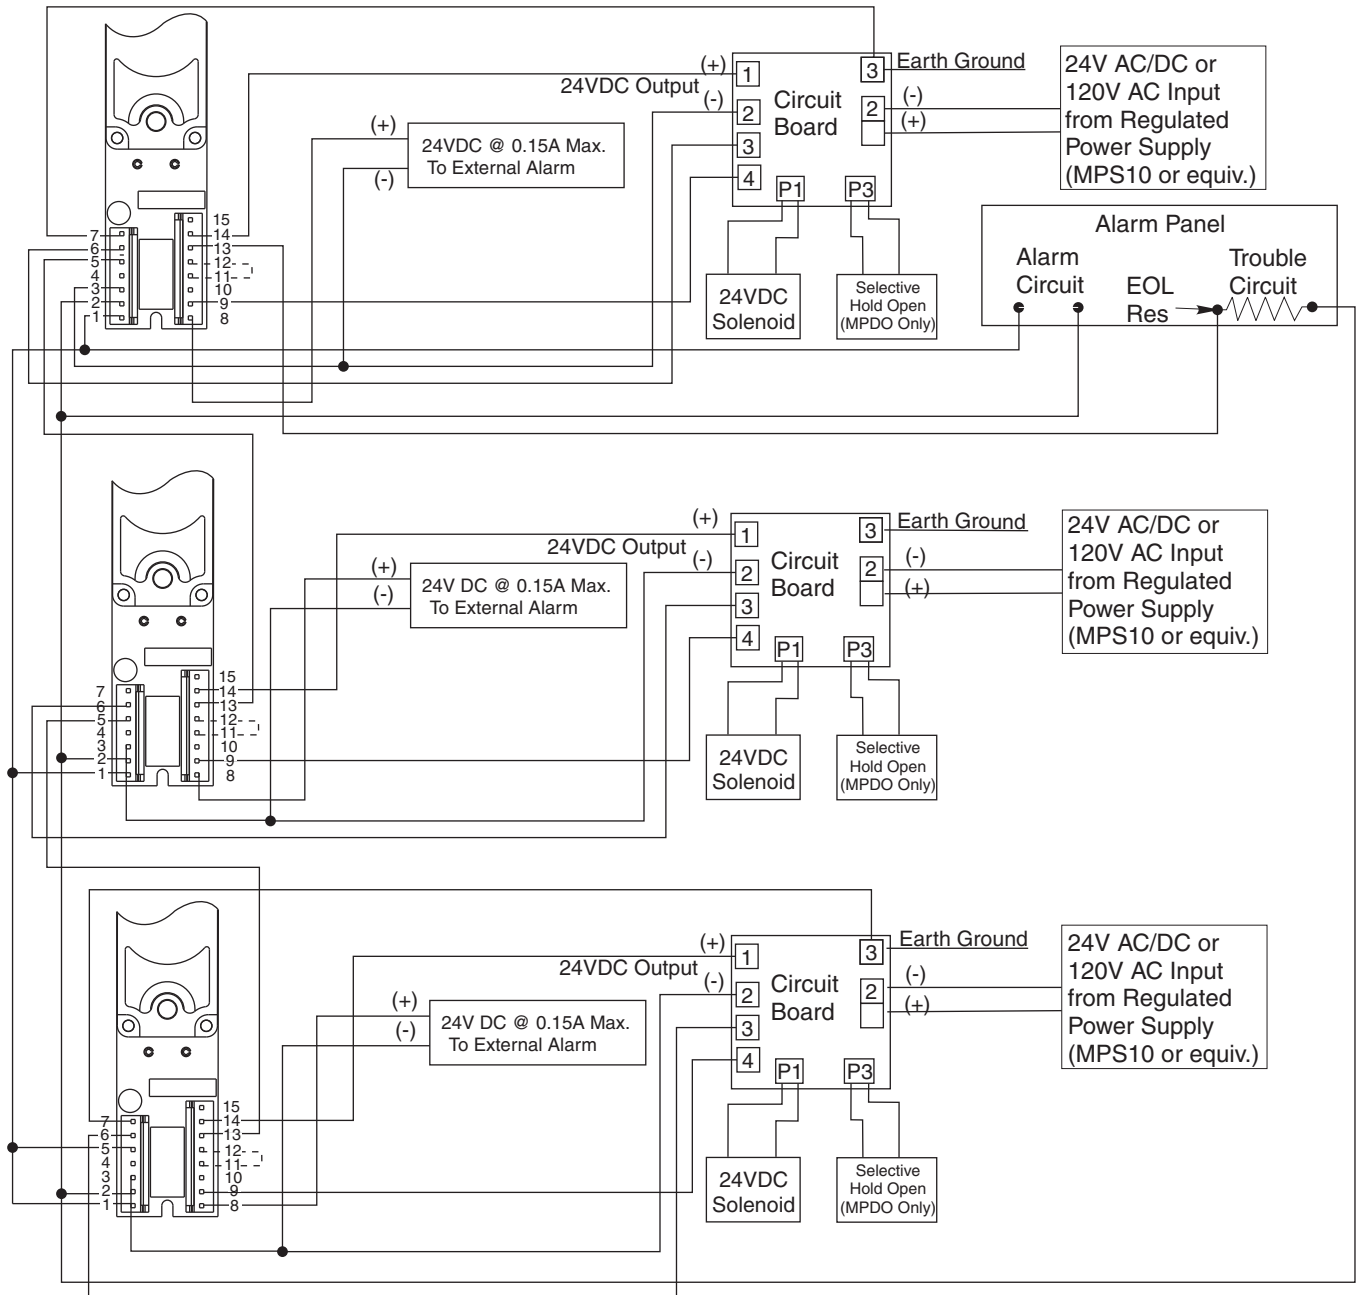

Notes:

End of Line (EOL) resistor determined and supplied by others.

Terminal numbers shown correspond to position numbers of terminal strips on detector. Additional units may be added as required based on this schematic. See electrical data sheet. Do not overload circuits.

All wiring connections use standard wiring practice conforming to local wiring codes.


Wiring Instructions

RIXSON®

ASSA ABLOY

MASTER WIRING DIAGRAM FOR 2-WIRE (CLASS B) SYSTEM WITH ALARM PANEL MONITORING

The alarm circuit and trouble circuit monitor if smoke is detected

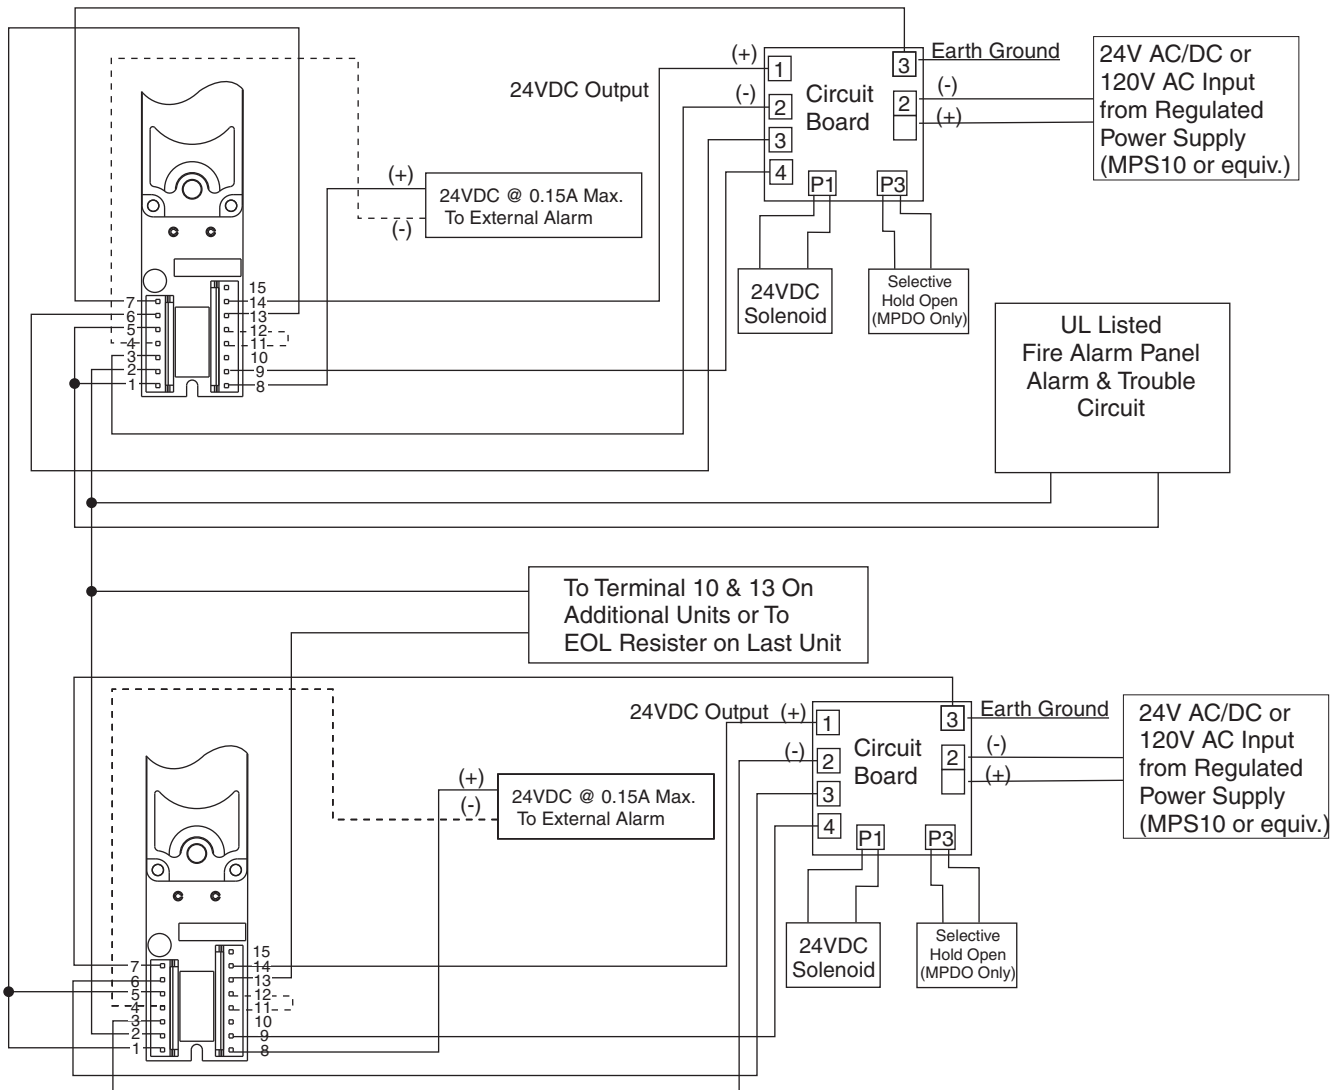


Notes:

- End of Line (EOL) resistor determined and supplied by others.
- Terminal numbers shown correspond to position numbers of terminal strips on detector.
- Additional units may be added as required based on this schematic. See electrical data sheet. Do not overload circuits.
- All wiring connections use standard wiring practice conforming to local wiring codes.


Wiring Instructions

Wiring Diagram for Master to Slave / Companion

Companion Unit - 24v ONLY
(99-726, 99-926)

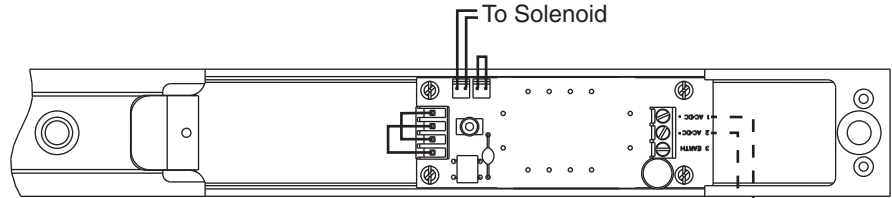

Master Unit - 120v or 24v Input
(99-626, 99-826)

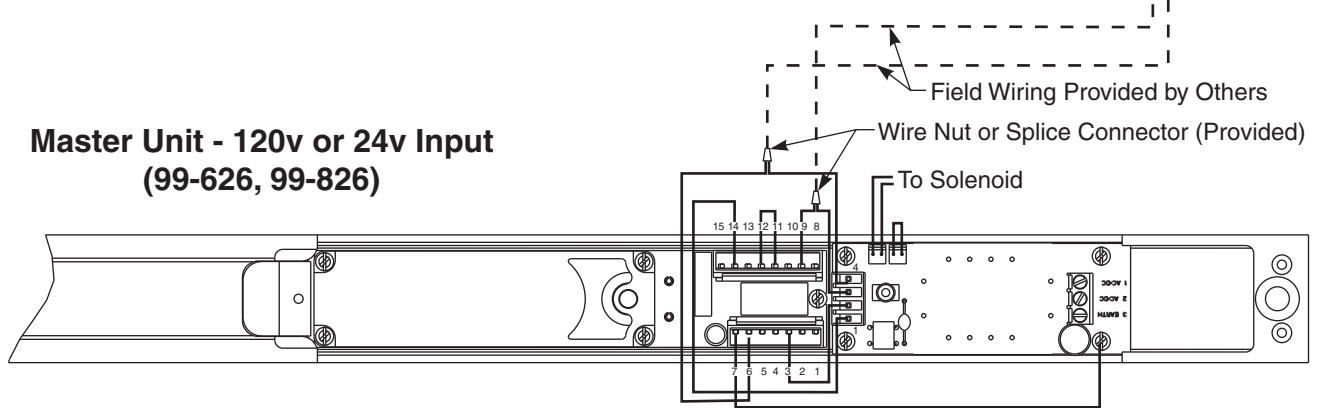

Circuit Board Connector (Red 4-Pin)	Detector Board Connector (White 7- & 8-Pin)
1	14
2	3
3	9
4	6
(Factory Wired)	

RIXSON®
ASSA ABLOY

3000 Highway 74 East • Monroe, NC 28112
Tel: (800)-457-5670
www.rixson.com