


7501 Electric Strike Installation Instructions

1

Components

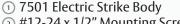


3 Keeper Shims

② #12-24 x 1/2" Mounting Screws



6 #4-40 x 1/4" Trim Enhancer Screws

7 12-Volt and 24-Volt Pigtail Connectors

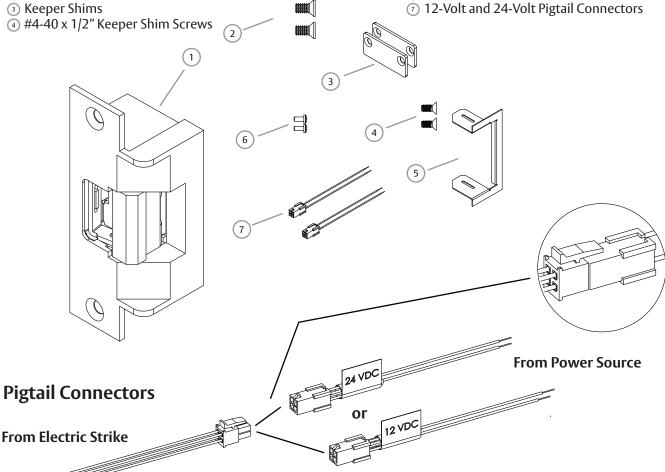

Specifications

ELECTRICAL RATINGS (Solenoid)	Solenoids are rated at +/- 10% indicated value. * Applies to AC Only: 10% max duty cycle (2 min. max on time)			
VOLTAGE	12 VDC	24 VDC	12–16 VAC	24 VAC
CONTINUOUS DUTY	0.24A	0.12A	-	-
INTERMITTENT DUTY*	-	-	0.24-0.32A	0.12A

	VOLTAGE		
MINIMUM WIRE GAUGE REQUIREMENTS	12 VDC	24 VDC	
200 feet or less	18 gauge	20 gauge	
200 - 300 feet	16 gauge	18 gauge	
300 - 400 feet	14 gauge	16 gauge	

Ratings

Static Strength: 1,500 lbs **Dynamic Impact:** 70 ft-lbs **Endurance:** 500,000 cycles

UL294 Performance Levels

Destructive Attack: Line Security: Endurance: Standby Power:

Level 1 (No attack test) Level I (No Line Security) Level IV (100,000 cycles)

Level I (No secondary power source)



NOTE 1: Before electrically connecting the device, the input voltage must be verified using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the electrical specification (See Page 1) may cause severe damage to the unit and will void the warranty.

NOTE 2: Installation wiring for the product and wiring methods shall be in accordance with the National Electrical Code, ANSI/NFPA 70.

Preparing the Frame

- 1. PREPARE door jamb per the appropriate template detail on Page 3.
- 2. **IF** using the Latchbolt Monitor (LBM), **THEN** SEE "LBM Wiring" on Page 2.

Installation


NOTE: For 12 VDC, the Plug In Connector (pigtail) marked "12 VDC" should be used; for 24 VDC, the pigtail marked "24 VDC" should be used.

- 1. CONNECT pigtail connector to the electric strike and to power source (See Page 1).
- 2. **IF** Operation Mode must be changed, **GOTO** and PERFORM steps in "Converting the Operation Mode" section.
- 3. INSTALL the electric strike in the jamb cutout using the $\#12-24 \times 1/2$ " mounting screws.
- 4. INSTALL keeper shims as shown on Page 3, if necessary.
- 5. INSTALL the trim enhancer as shown on Page 3, if necessary.


Converting the Operation Mode


NOTE: The suitability of the locks in the FAIL SECURE OPERATION mode is up to the local Authority Having Jurisdiction (AHJ) and emergency exit hardware may be required in such installations.

- 1. Because the electric strike ships in fail secure mode, COMPLETE the following steps to convert to fail safe mode.
- 2. REMOVE the cotter pin from the solenoid linkage.
- 3. REMOVE the solenoid mounting screw and washers.
- 4. REMOVE the solenoid from the keeper module.
- 5. TURN the solenoid upside down, and RE-INSERT it into the keeper module.
- RE-INSTALL the mounting screw and washers at the opposite end of the keeper module, and ENSURE the "D" washer is positioned firmly into the solenoid slot.
- 7. REPLACE the cotter pin to secure the solenoid linkage.

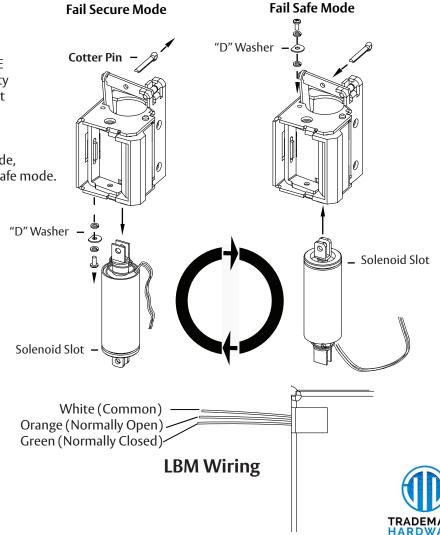


7501 Template & Dimensions

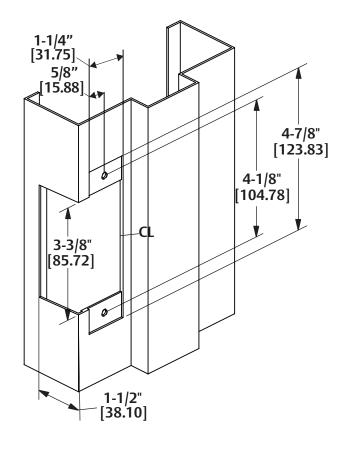

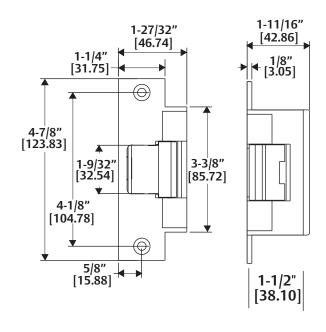



Installing the Keeper Shims

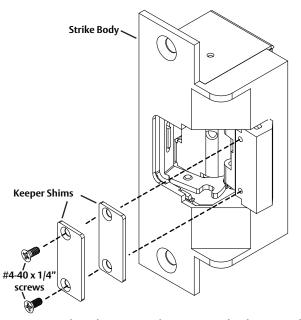


UNLOCK the electric strike, ALIGN the keeper shims as shown, and FASTEN to the keeper using the provided $\#4-40 \times 1/4$ " screws.

Installing the Trim Enhancer

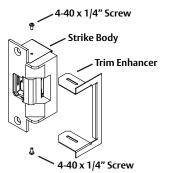

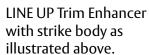

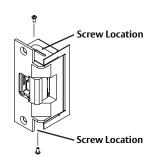

FASTEN the Trim Enhancer to the strike at the screw location illustrated above.

NOTE: It may be necessary to enlarge the cutout to accommodate the added thickness of the Trim Enhancer & screws.





HES, Inc. Phoenix, AZ 800-626-7590 www.hesinnovations.com

